

WOODEN PUPPY NIGHTLIGHT


# LUMINOUS PAWS

ASSEMBLAGE INSTRUCTIONS






# ASSEMBLAGE INSTRUCTIONS


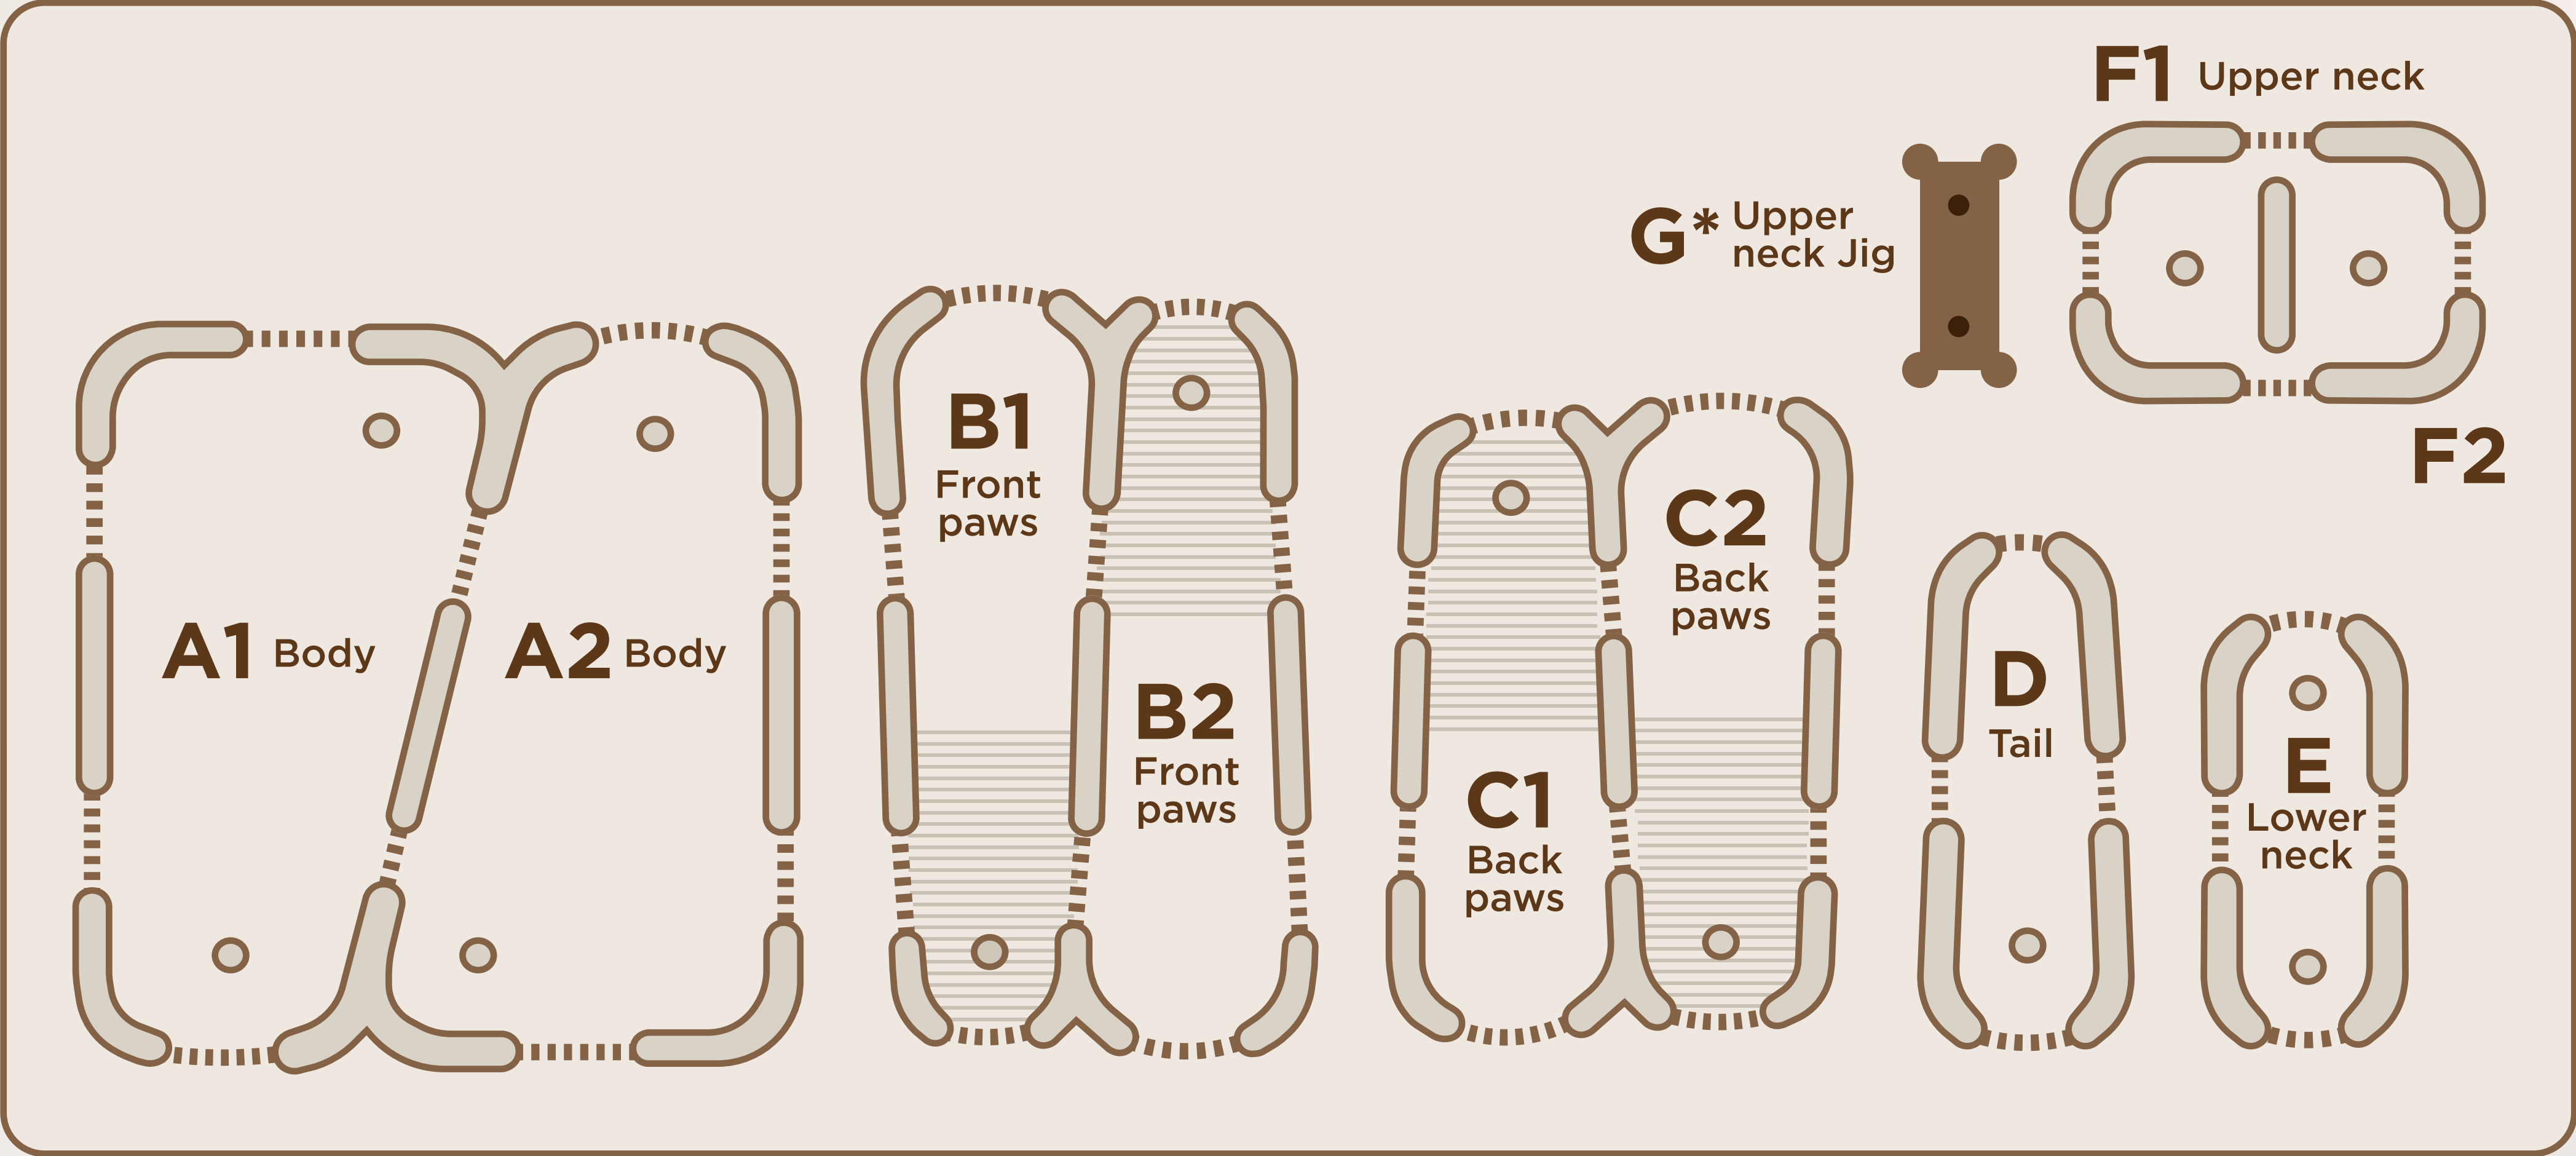


Legend:  
----- Bridges to be cut with saw

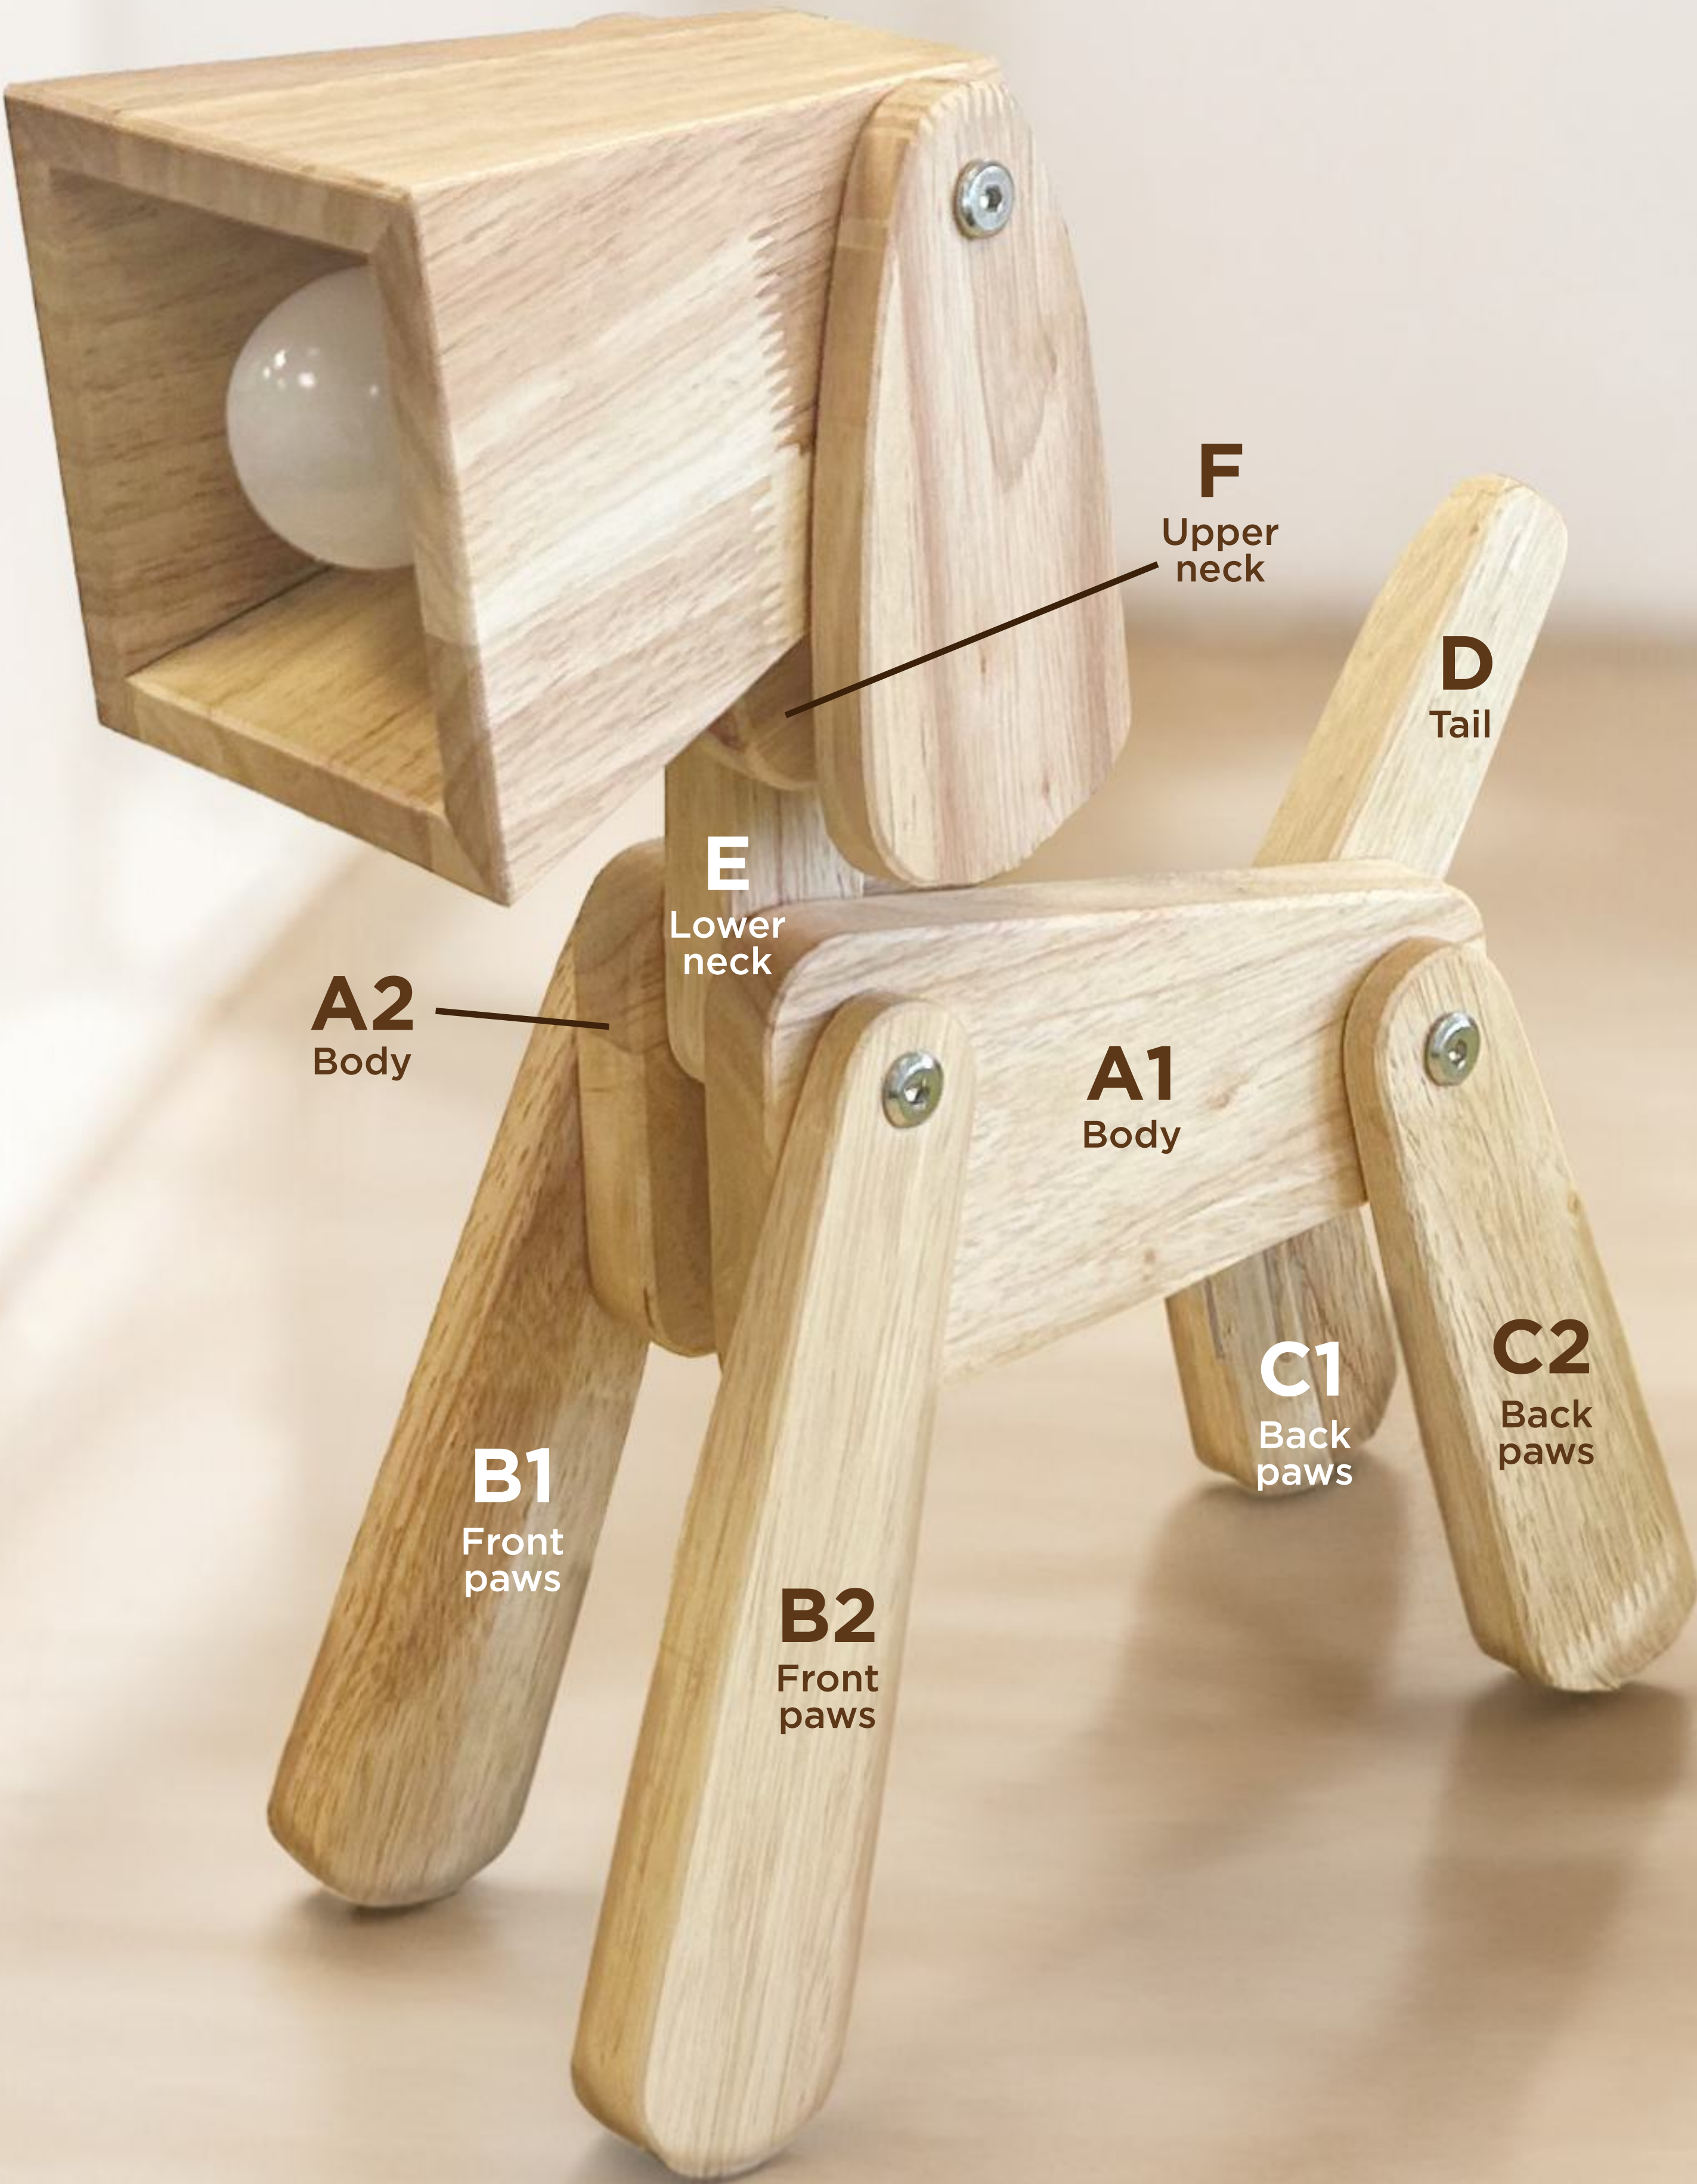



# ASSEMBLAGE INSTRUCTIONS

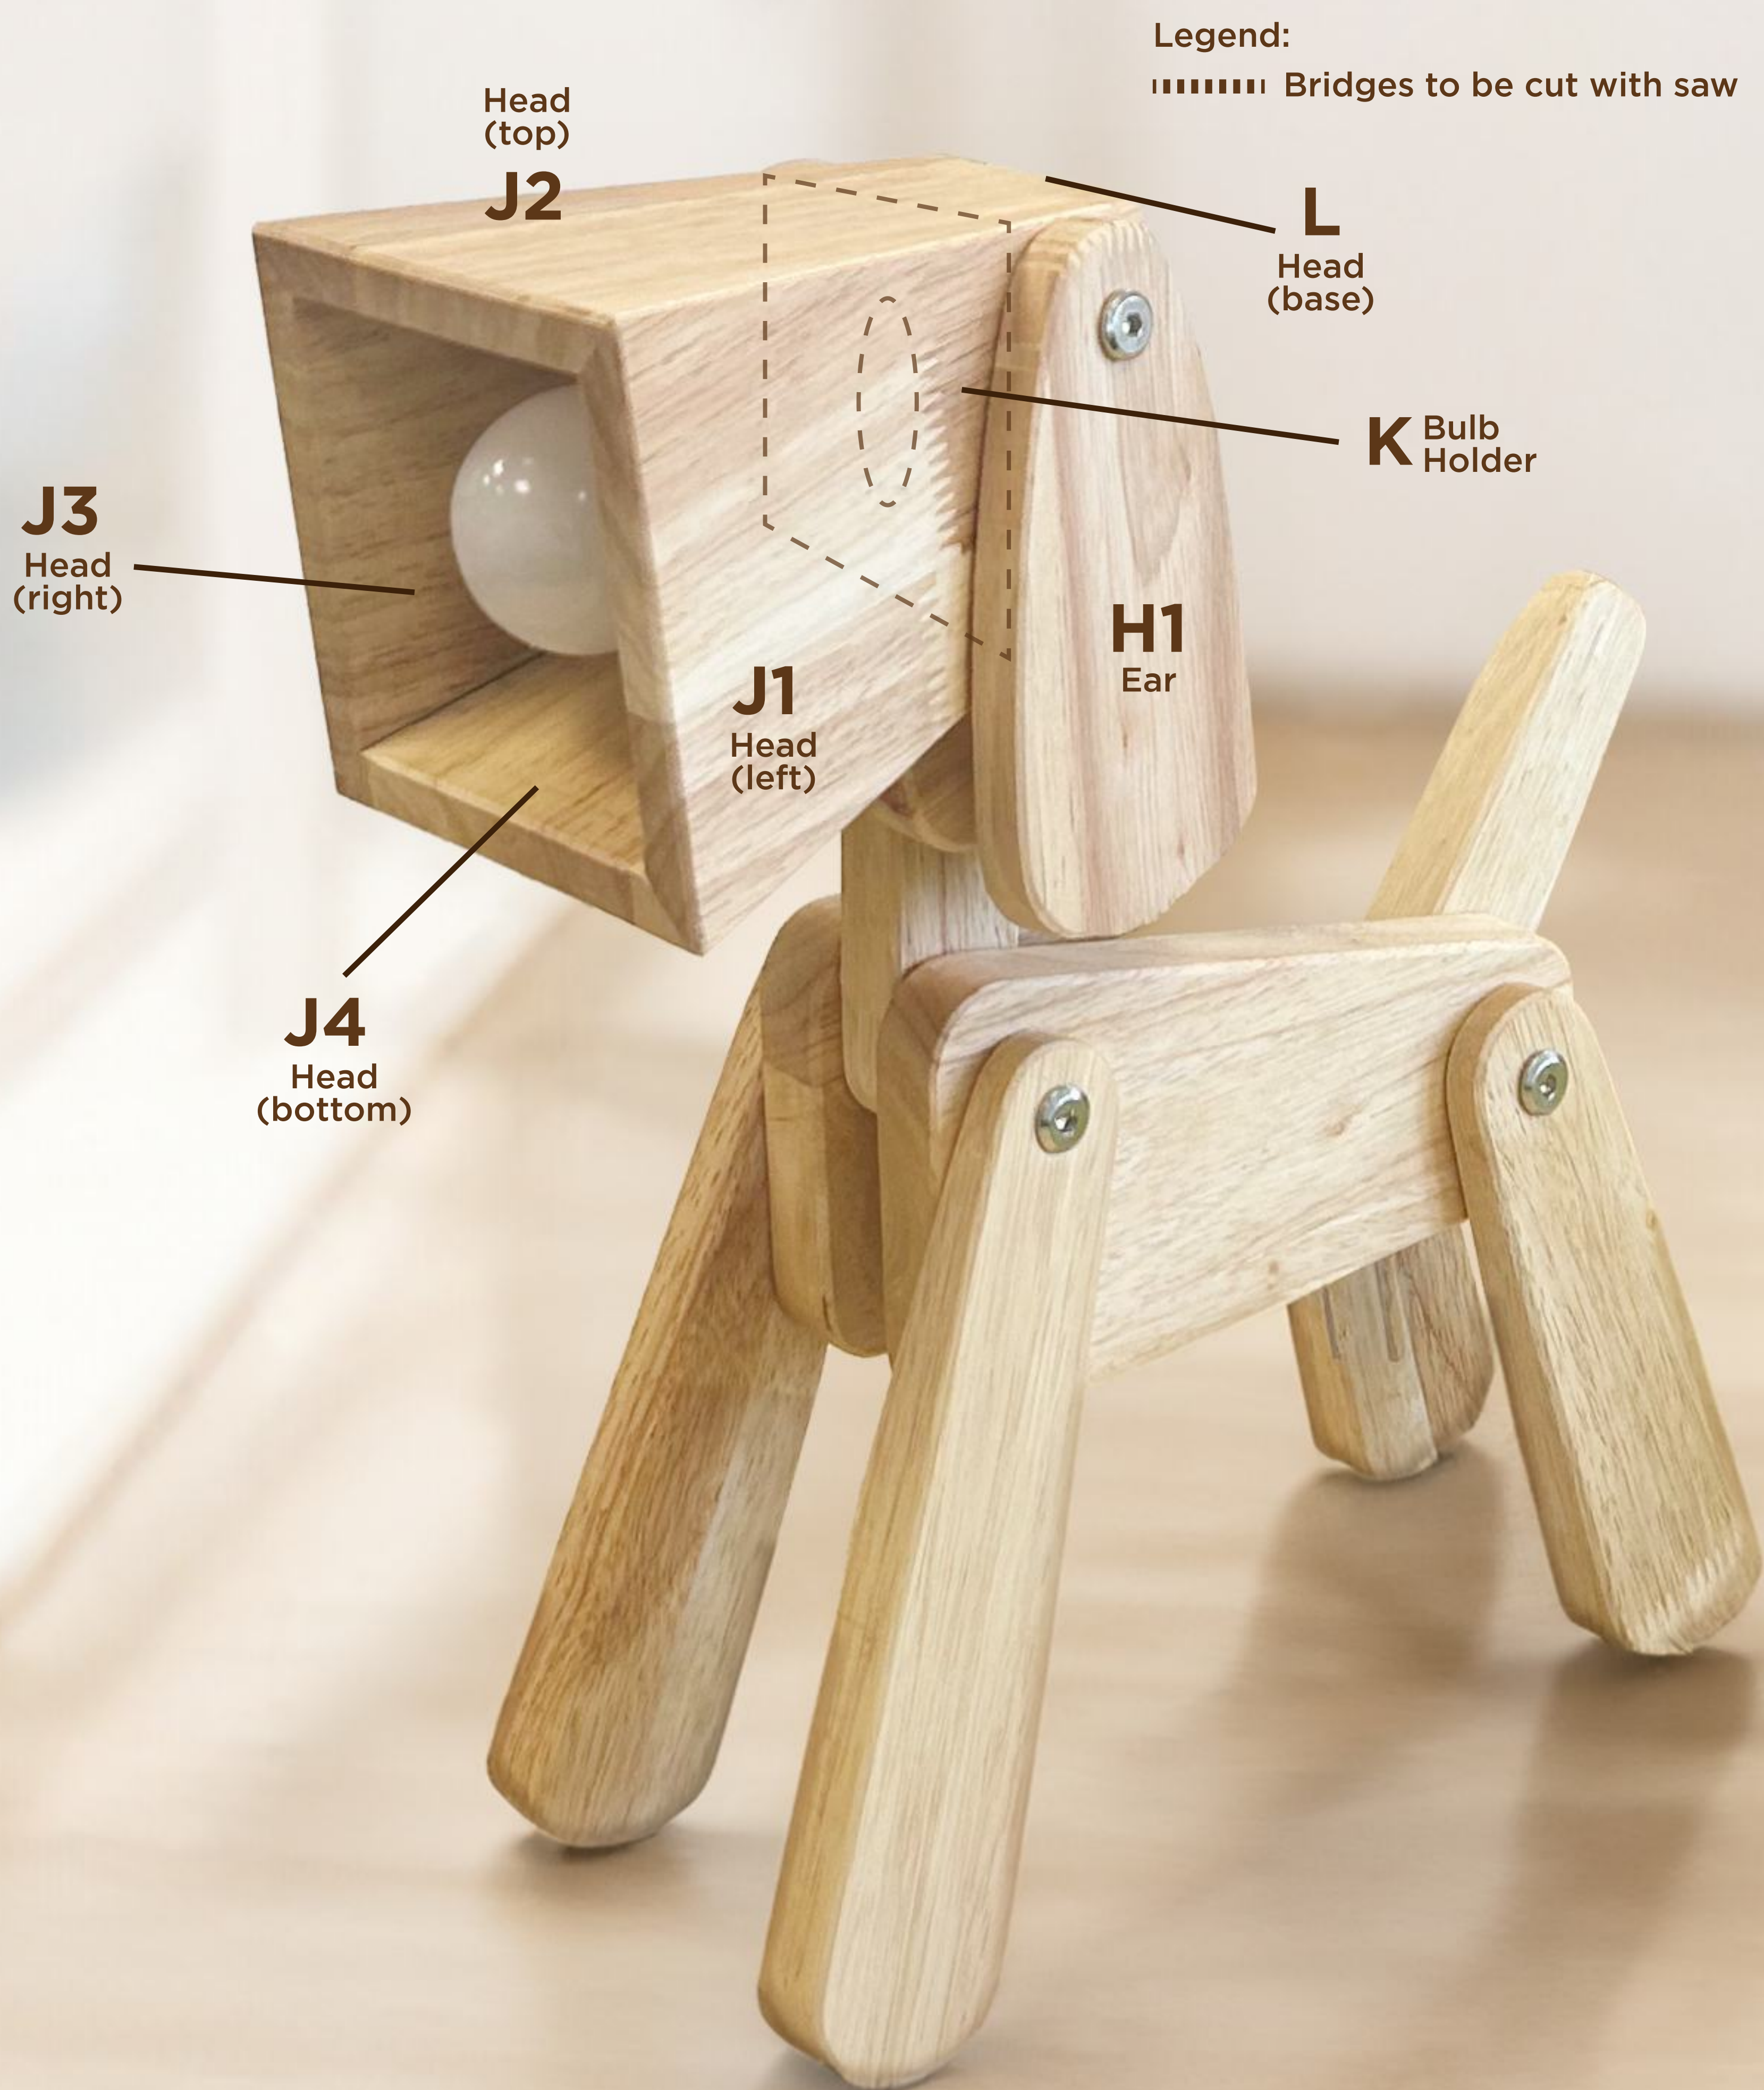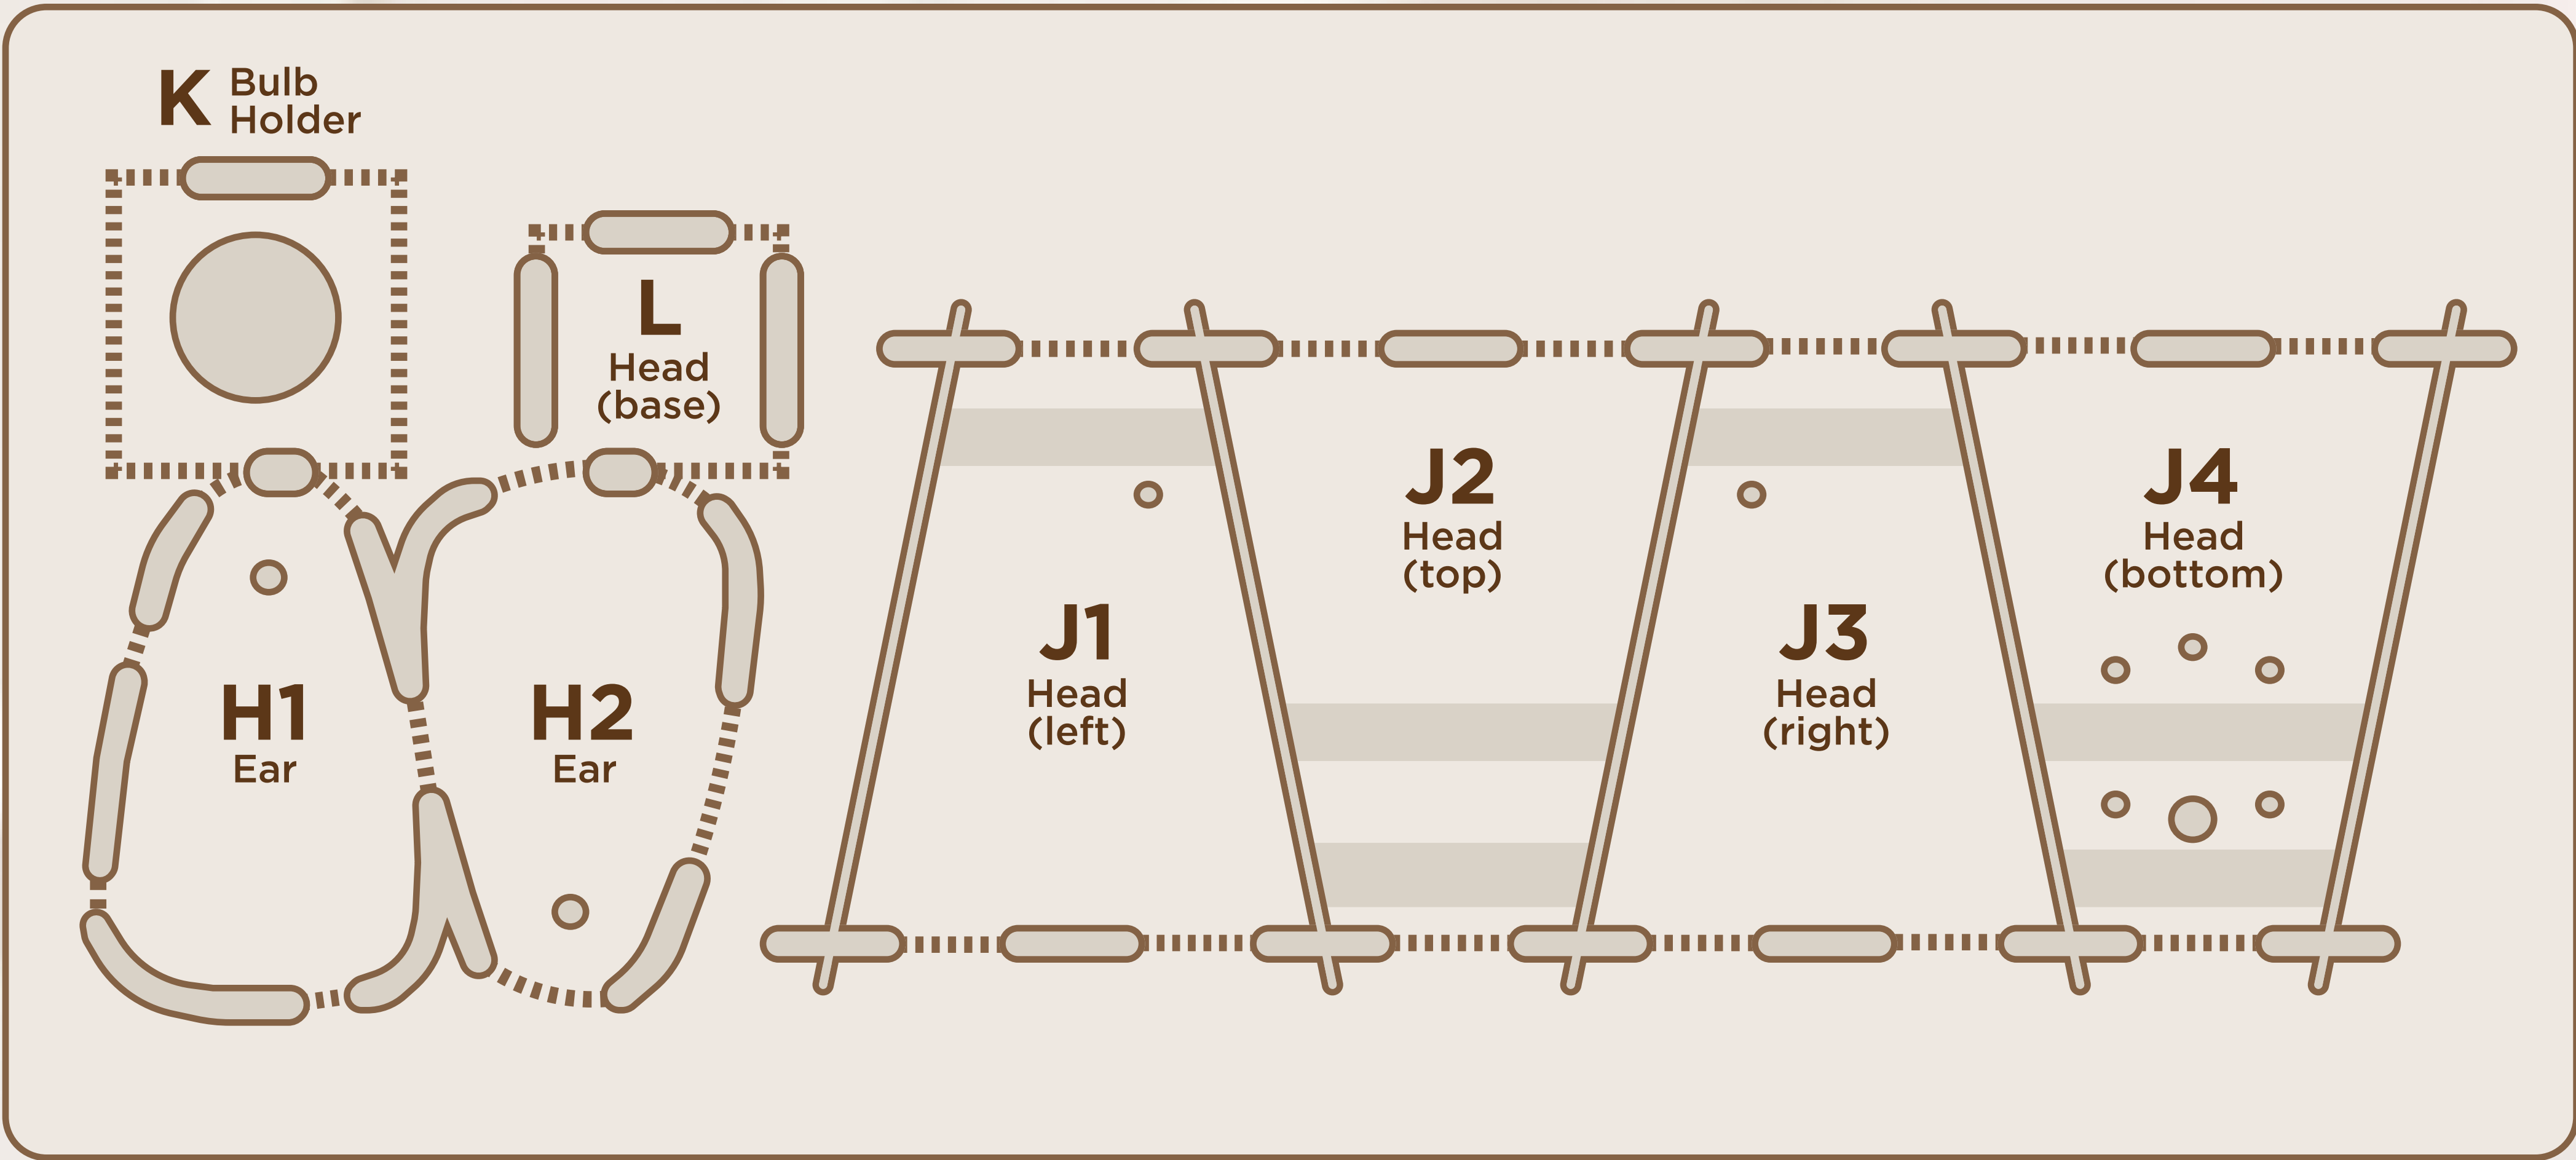





# ASSEMBLAGE INSTRUCTIONS

01

## Attach Head (Bottom) to Upper Neck

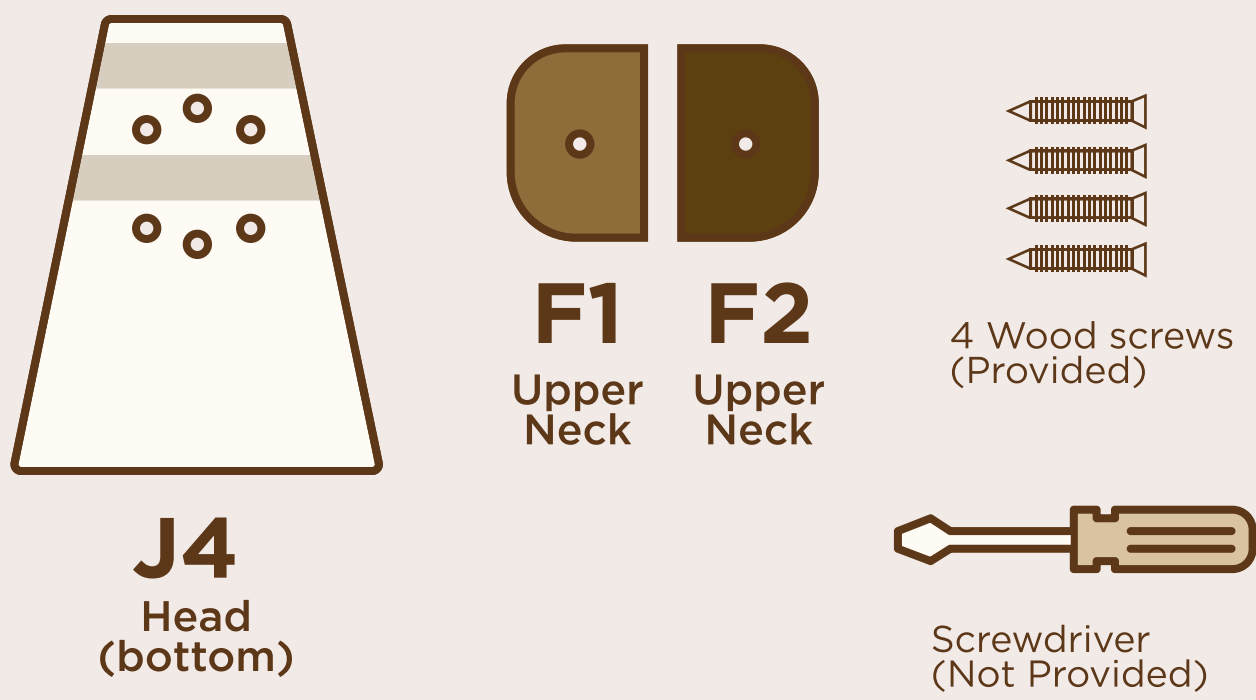


1. Place F1 and F2 (Upper Neck) on either side of J4 (Head Bottom).
2. Line up the (previously drawn on) screw marks on F1 and F2 with the pre-drilled holes on J4.
3. Using the provided wood screws, insert the 4 screws through J4.
4. Using a screwdriver, apply steady pressure and force to drive the wood screws through the pre-drilled holes on J4 into the screw marks of F1 and F2.

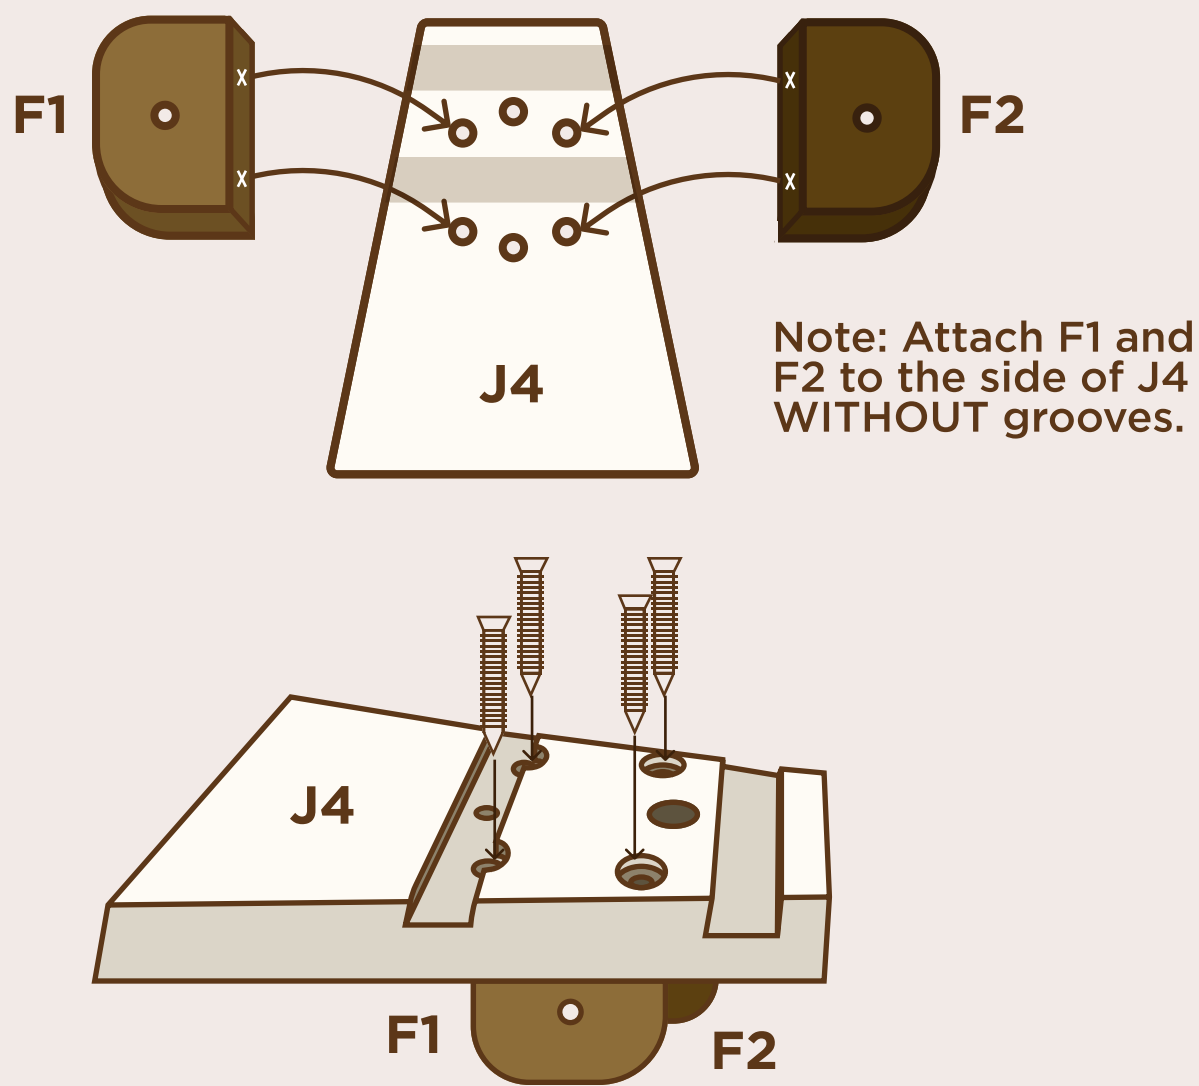


02

## Apply Glue on the Head

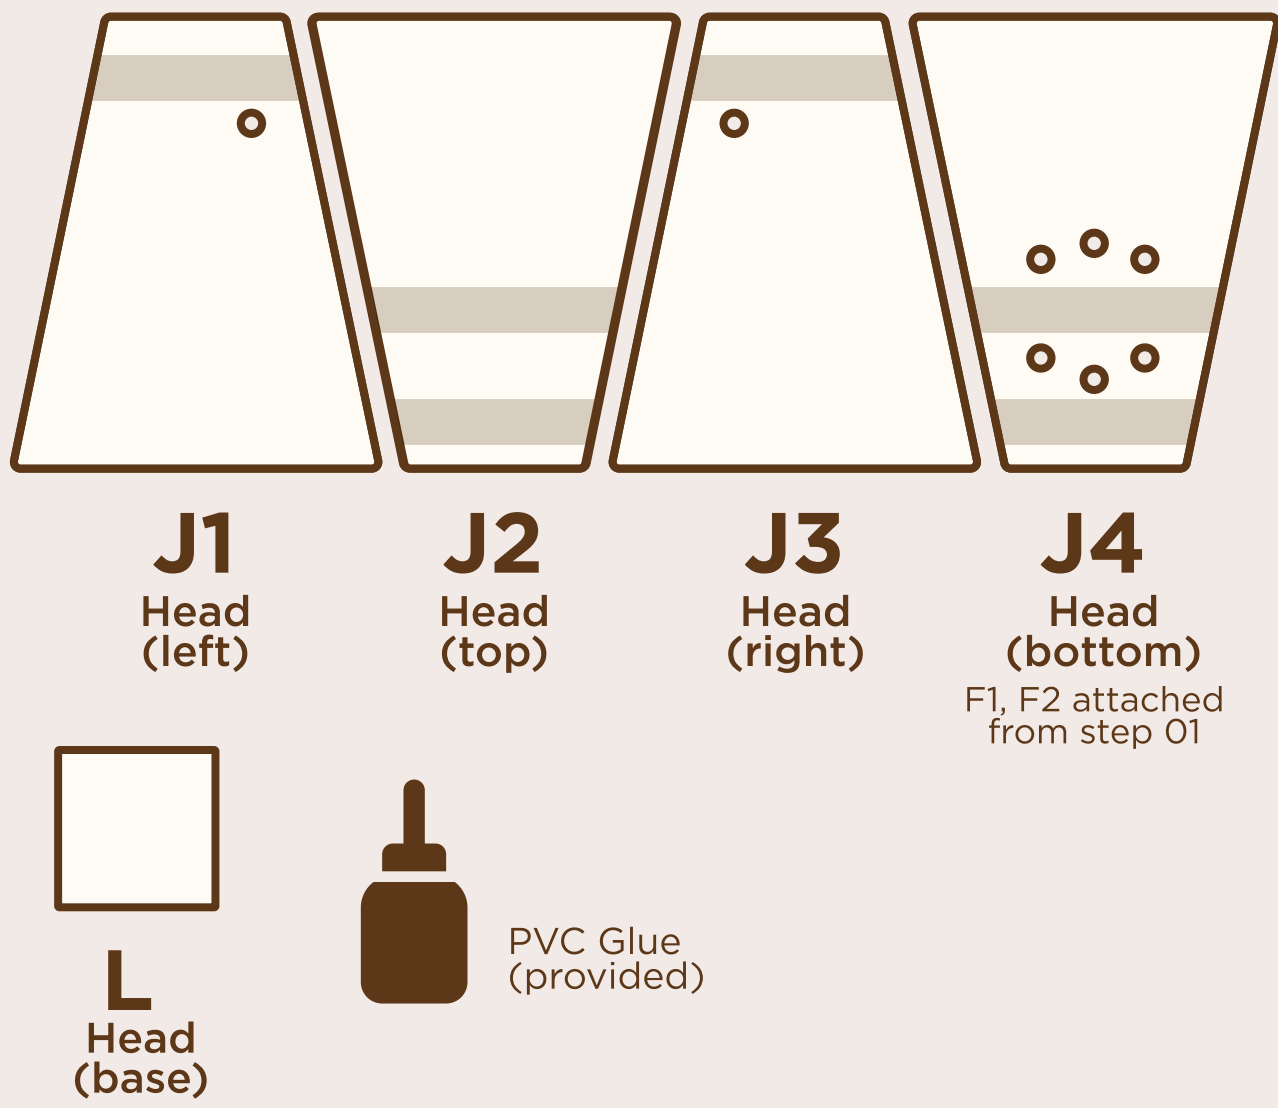


1. Apply a thin layer of wood glue along the edges of pieces J1 (top head), J2 (top head), J3 (right head), and J4 (bottom head) where they will connect to each other and to piece L (head base).
2. Follow the coloured diagram below for guides on where to place the glue.

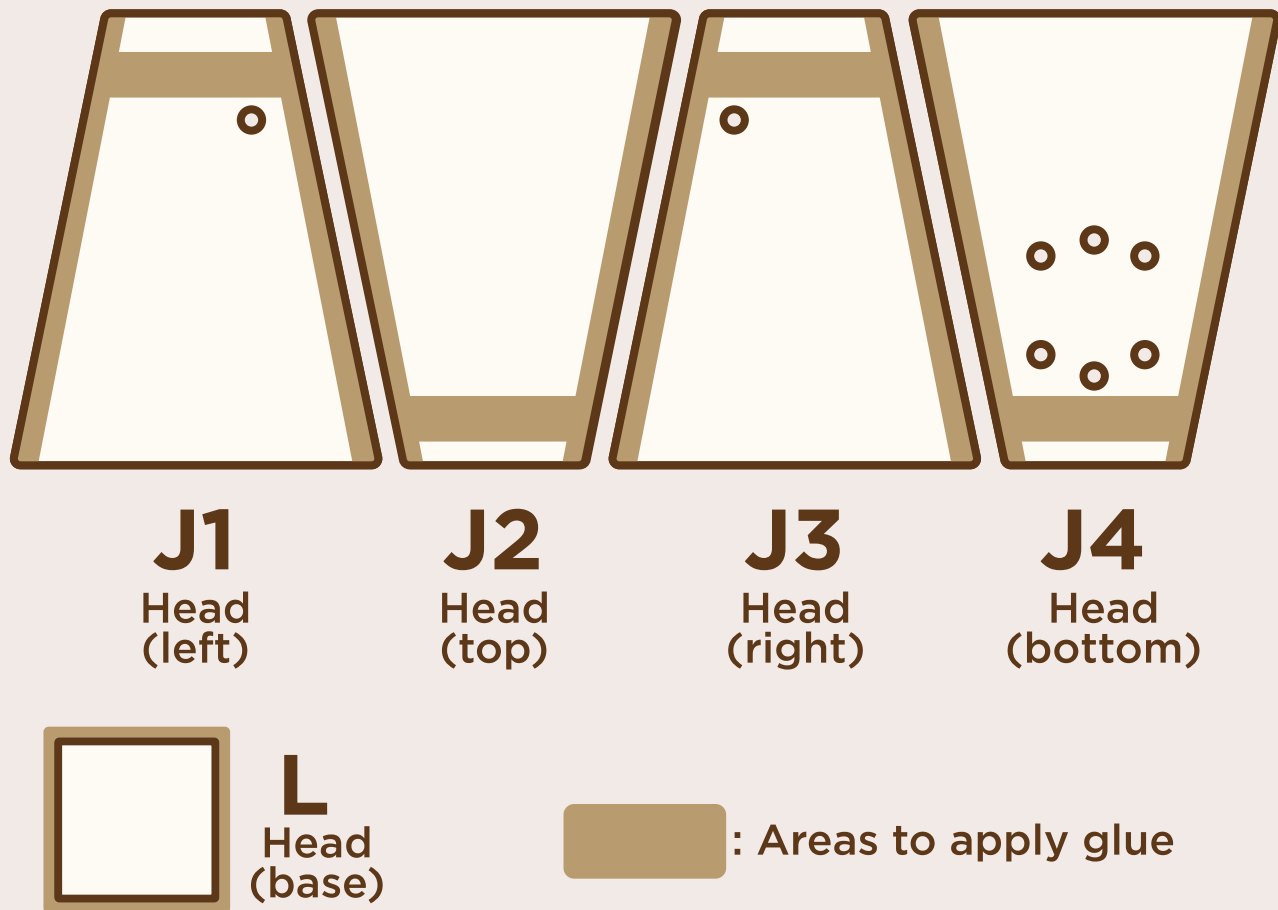


03

## Assemble the Head

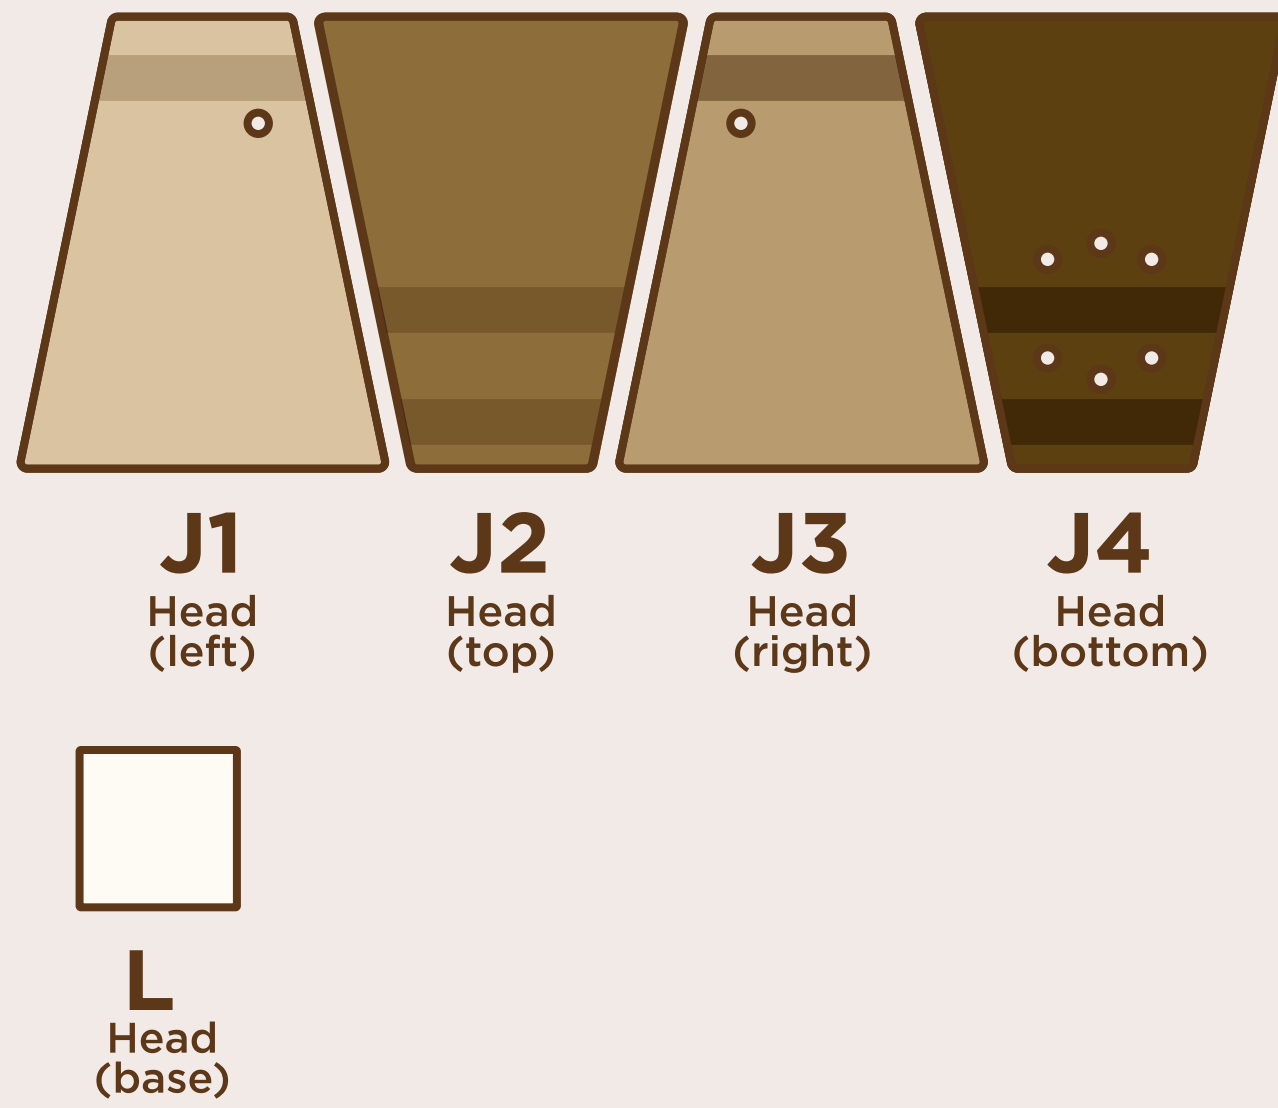


1. Make sure all of the wooden pieces with grooves are facing inwards.
2. Carefully align and fit pieces the grooves of J1, J2, J3, and J4 around piece L. Make sure the edges and corners match perfectly to form the head's shape.

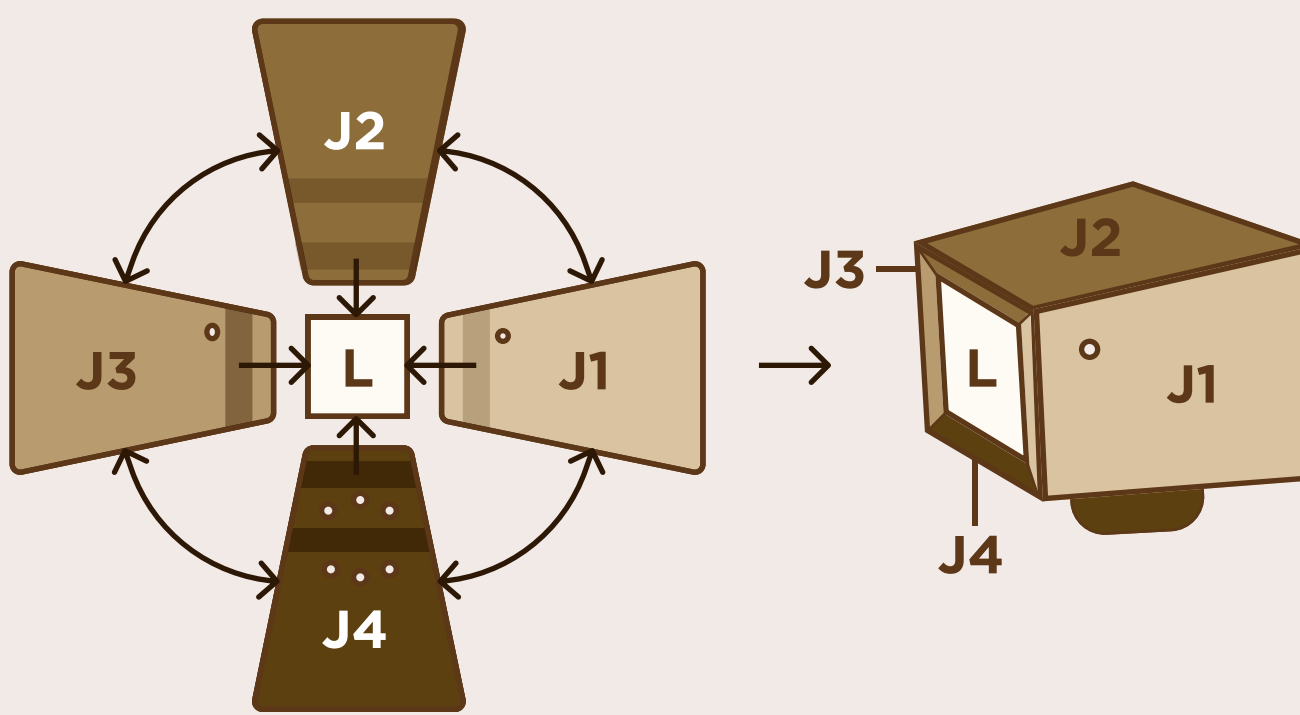


04

## Securing the Head Assembly

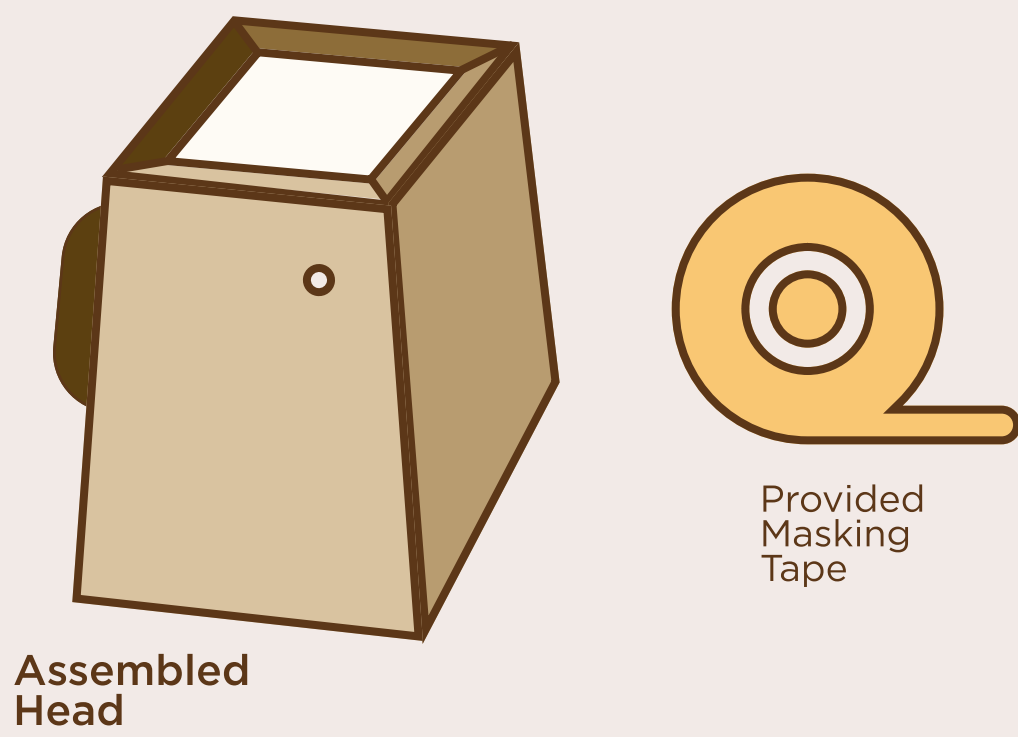

1. Wrap the masking tape provided around the entire perimeter of the assembled head to hold everything in place securely.
2. Using a damp cloth, wipe away any glue that oozes out between the wood pieces.
3. Leave the tape around the head while letting it dry for at least 12h.

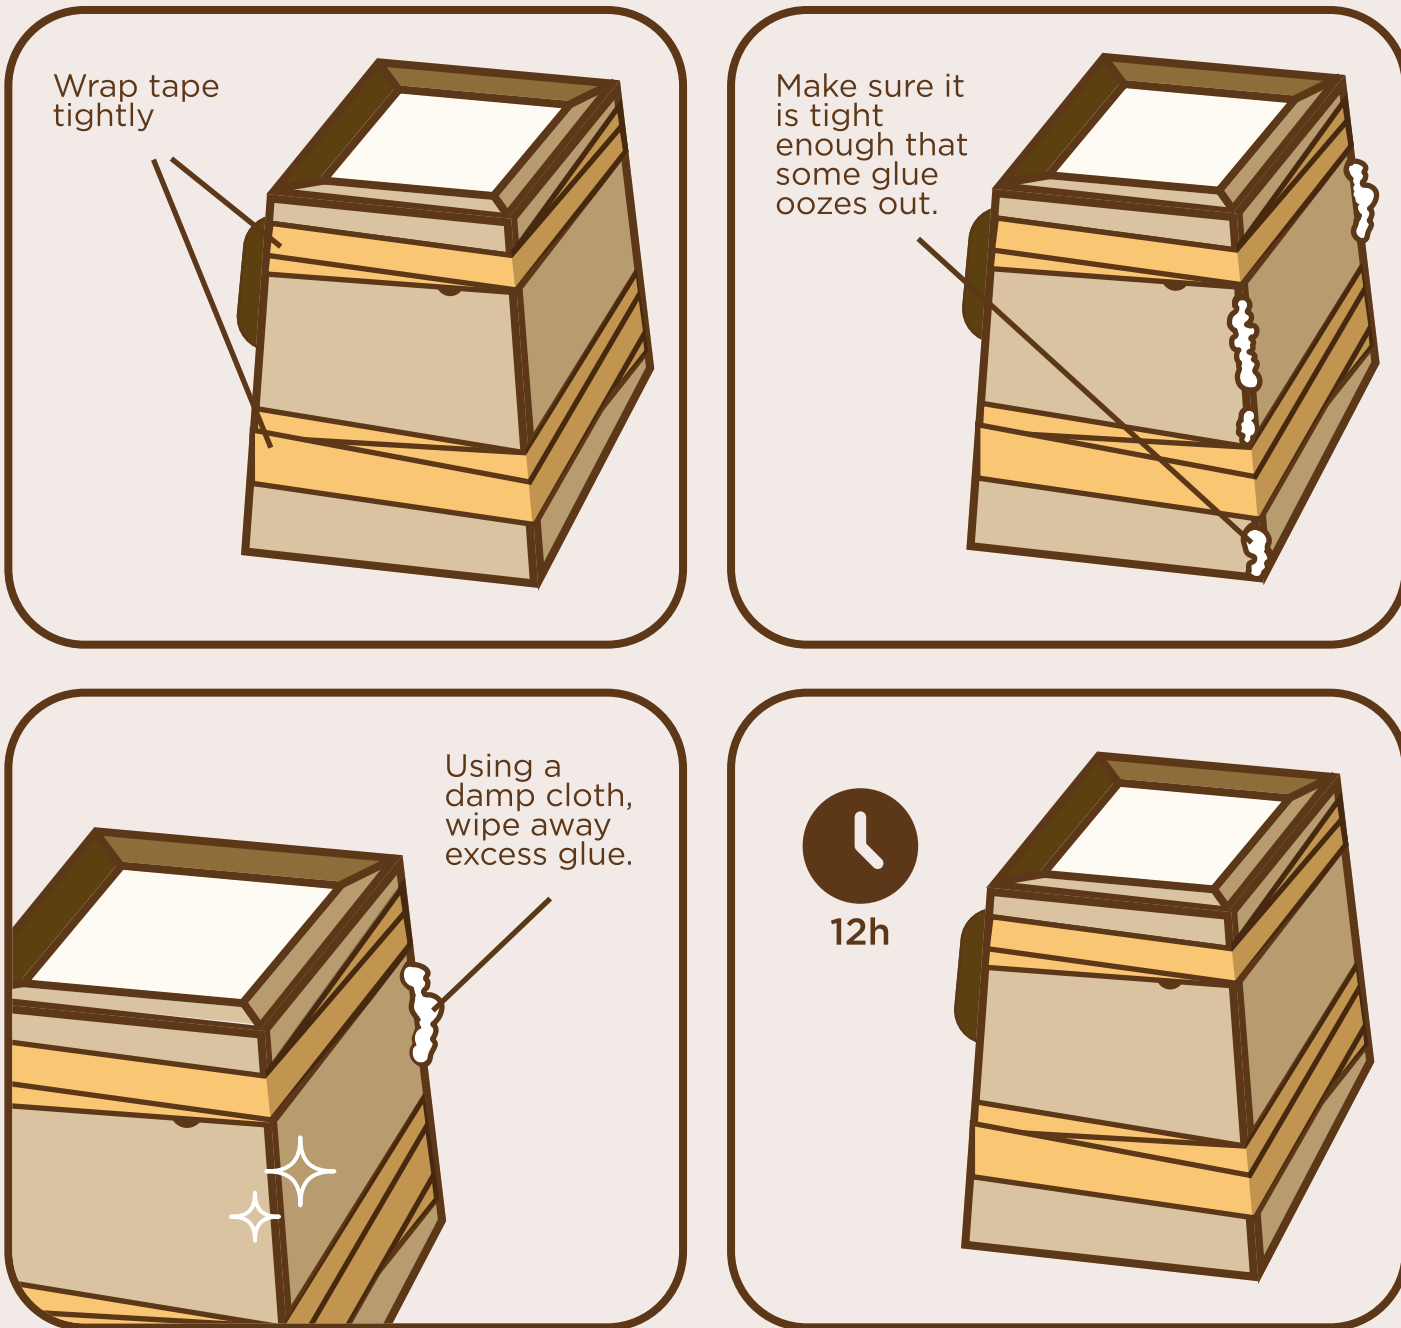


05

## Assemble the Body (Back)




1. Layer the pieces in this order from bottom to top: C1 (Back Paws), A1 (Body), D (Tail), A2 (Body), C2 (Back Paws) with the previously sanded paws facing the body.
2. Using a large male screw, secure C1, A1, D, A2 and C2 together.

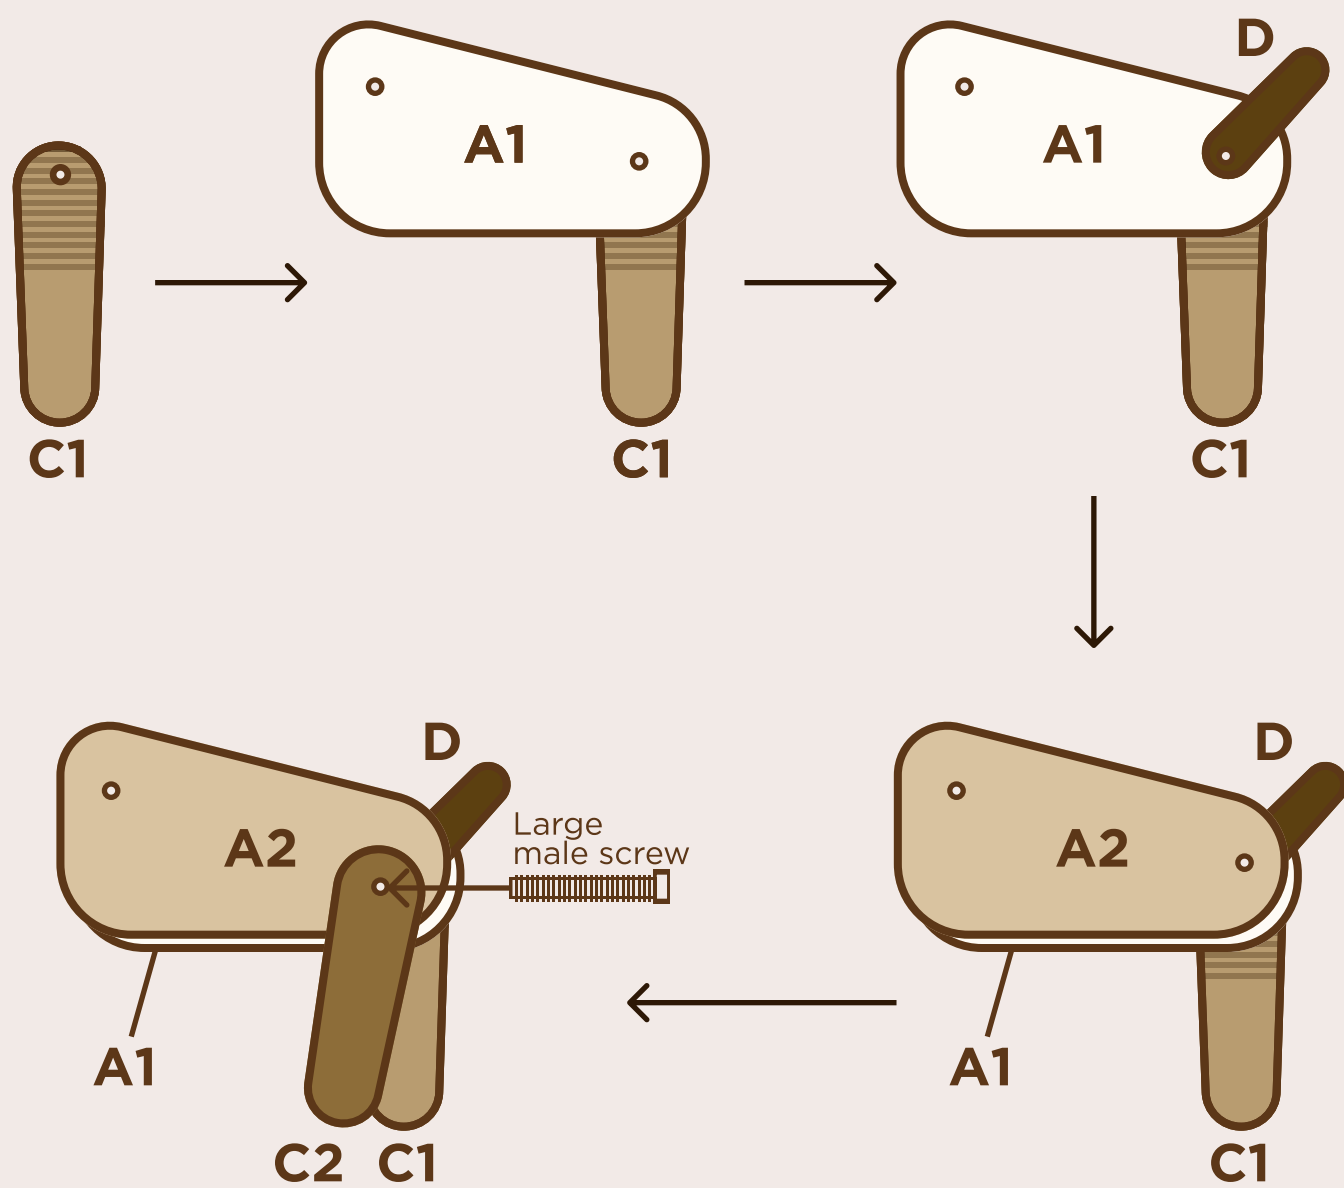


06

## Assemble the Body (Front)

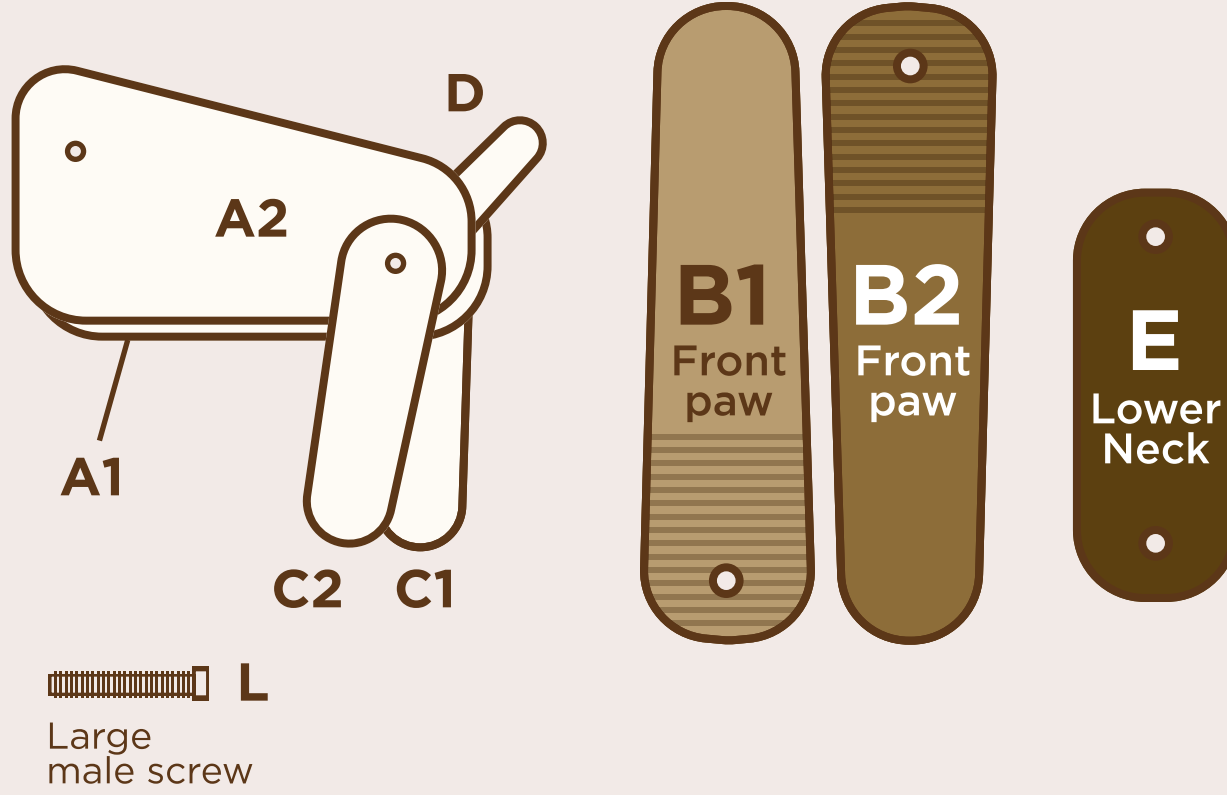


1. Slide E (Lower Neck) into the empty space between A1 and A2 bodies.
2. Place B1 and B2 on either side of the body, with the previously sanded paws facing the body.
2. Using a large male screw, secure B1, A1, E, A2 and B2 together.

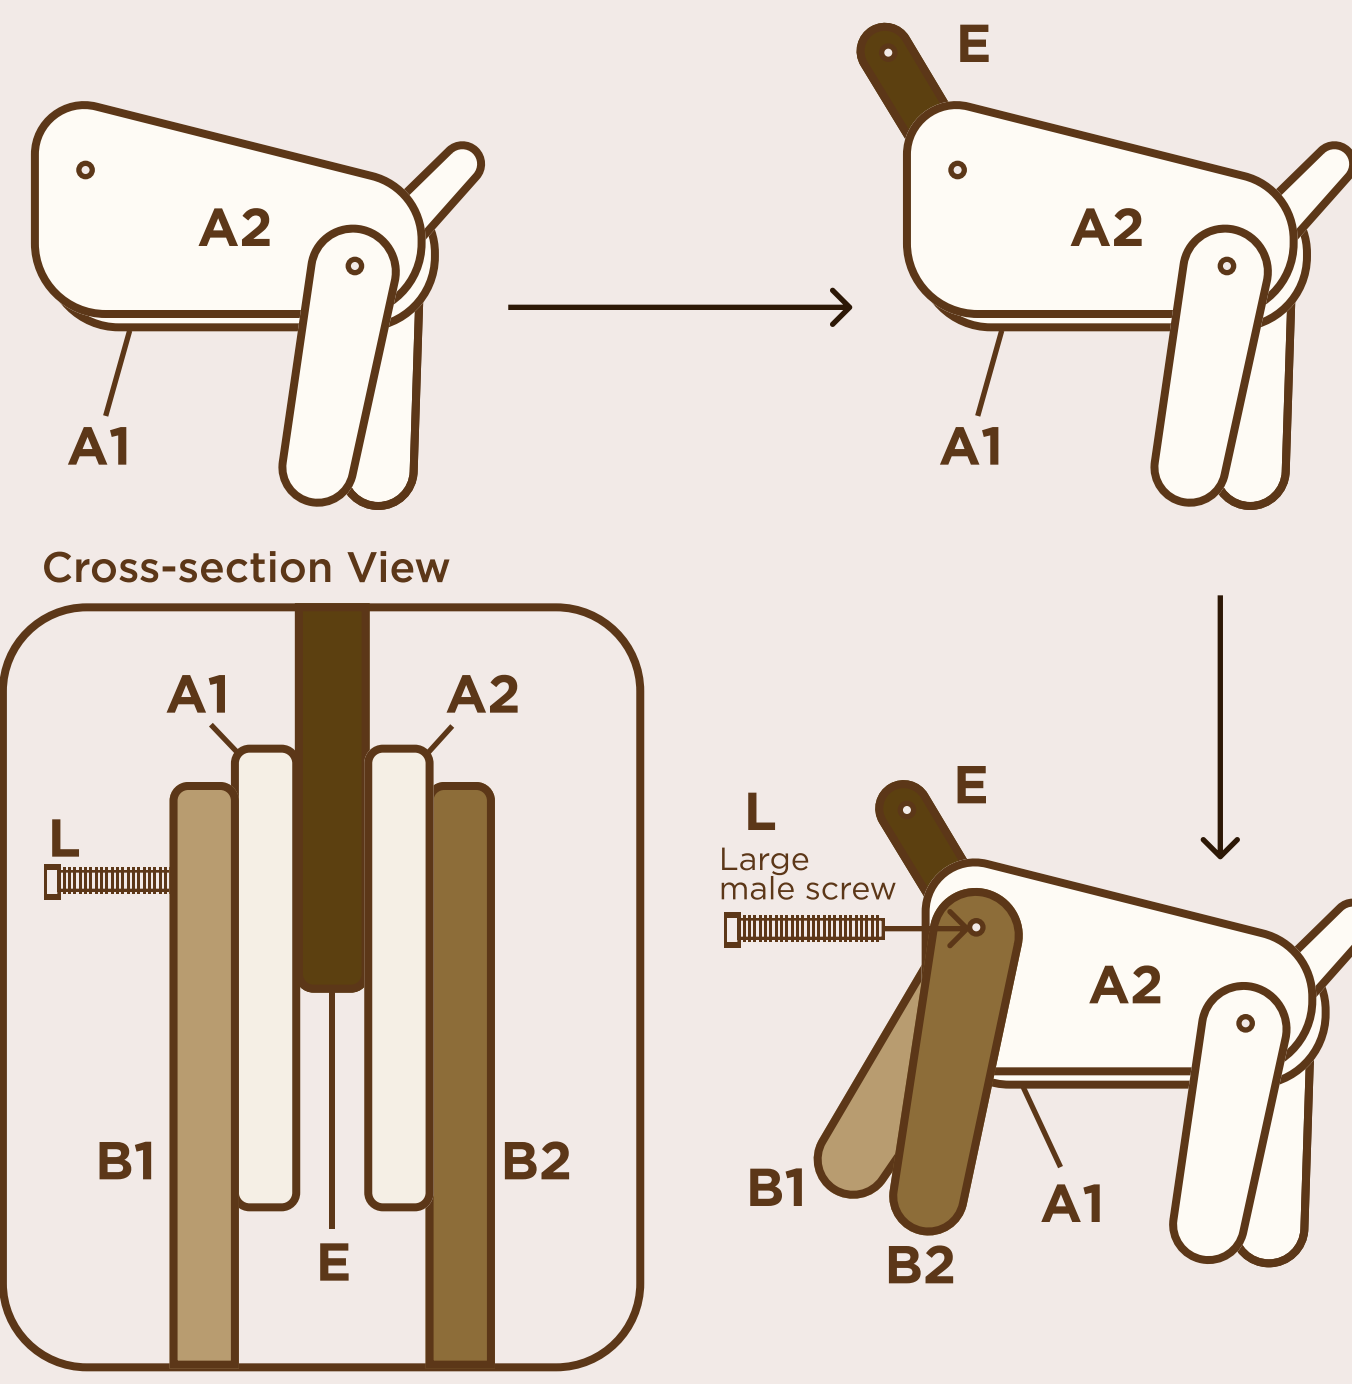




# ASSEMBLAGE INSTRUCTIONS

## 07 Screw in the Ears

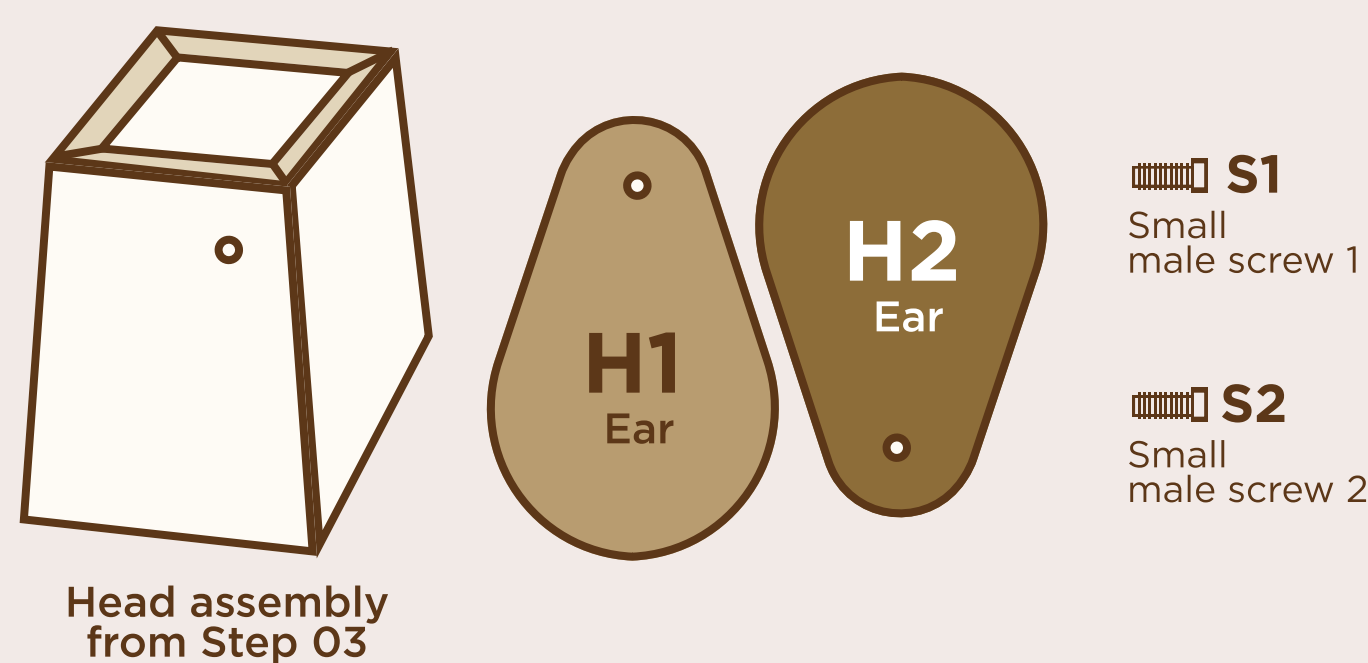


1. Remove the masking tape from the head assembly after 12h.
2. Take H1 and H2. Align them with the pre-drilled holes on either side of the head.
3. Using an axle key (provided), apply firm pressure to drive the small male screws directly into the wooden head. Some force will be needed to secure the screws fully into the wood.

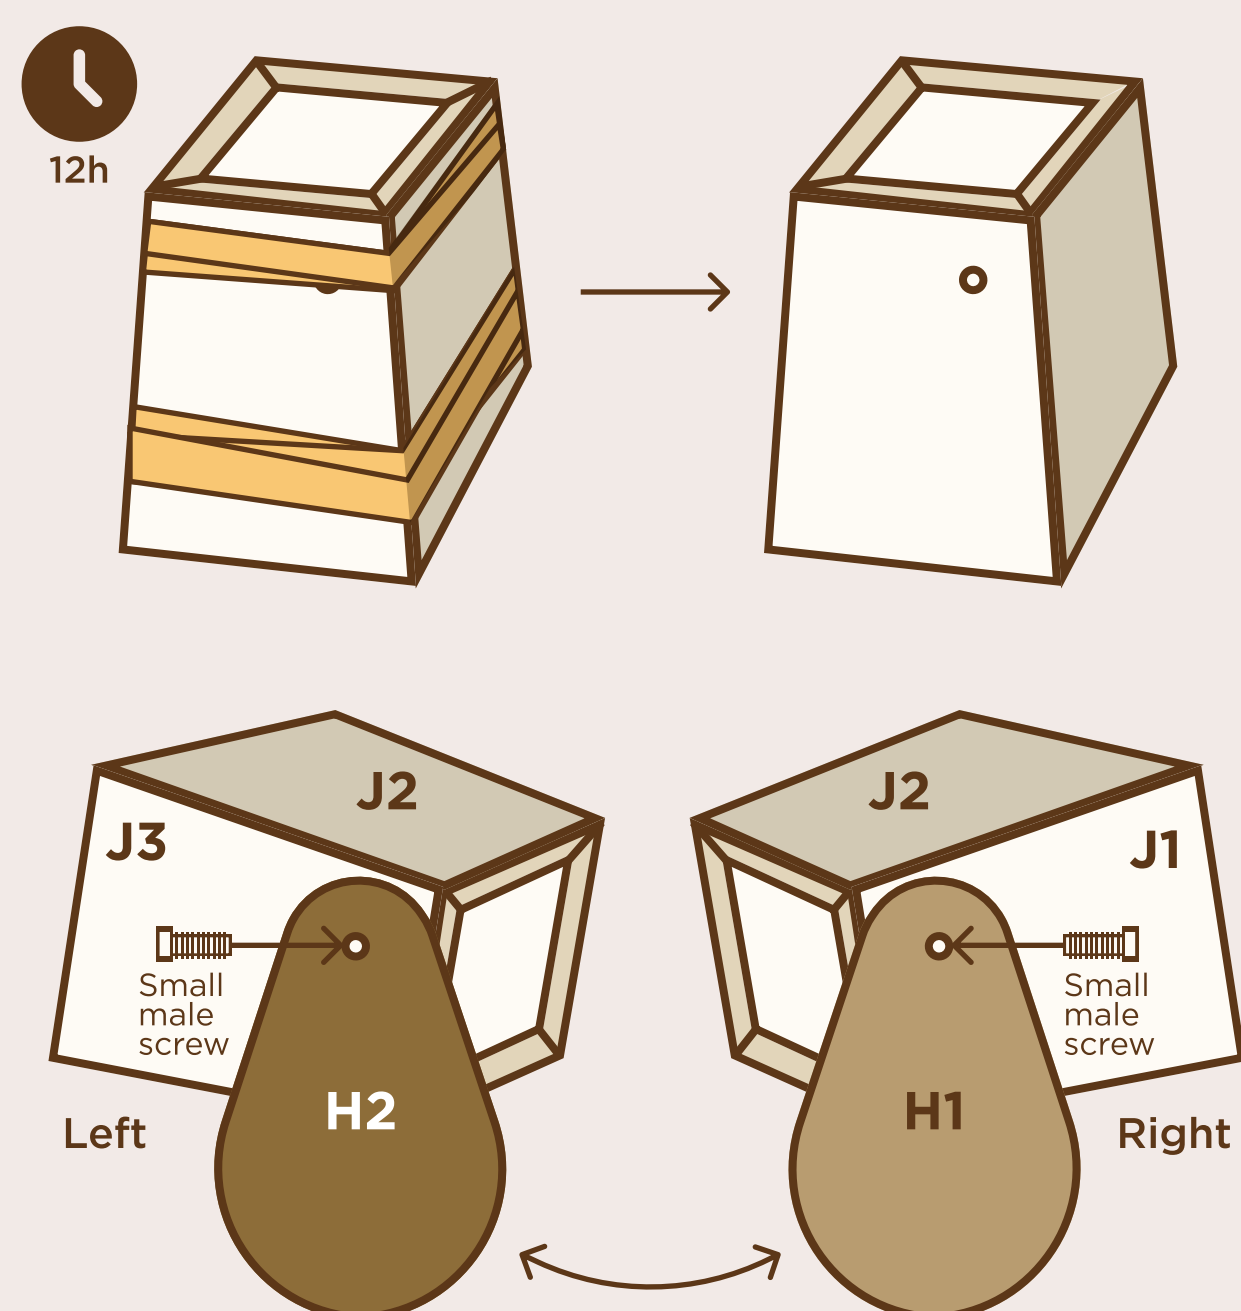


## 08 Insert Bulb Wire


1. Flip the dog head such that J4 (bottom of head, the one with multiple holes) is facing you.

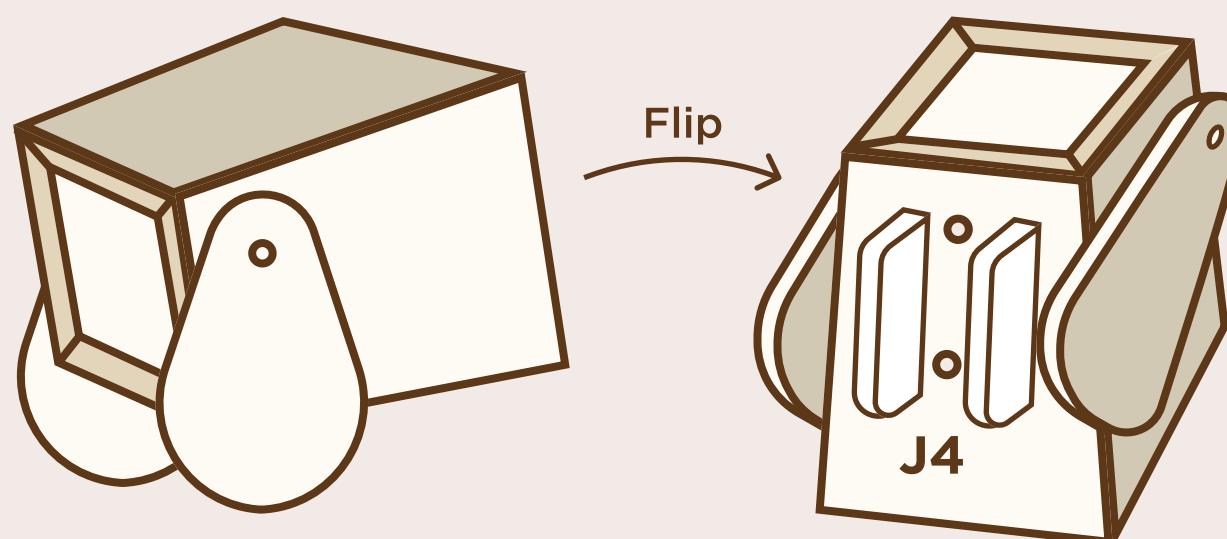


1. Feed the bulb wire through the hole located on top of J4.

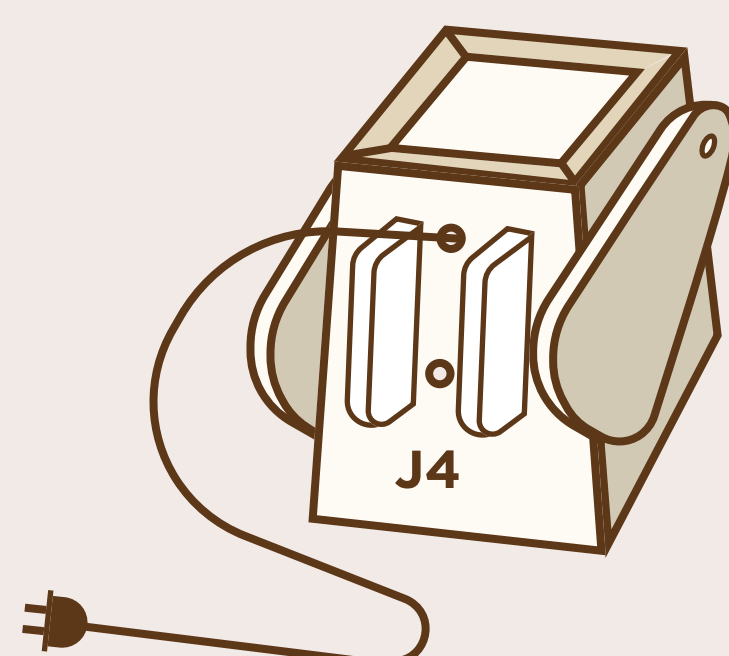

2. From the front of the dog's head, tie a simple knot on the wire to prevent it from slipping out of the hole.
3. Insert the wires into the holes of the plastic bulb component (packaged together with the wires).

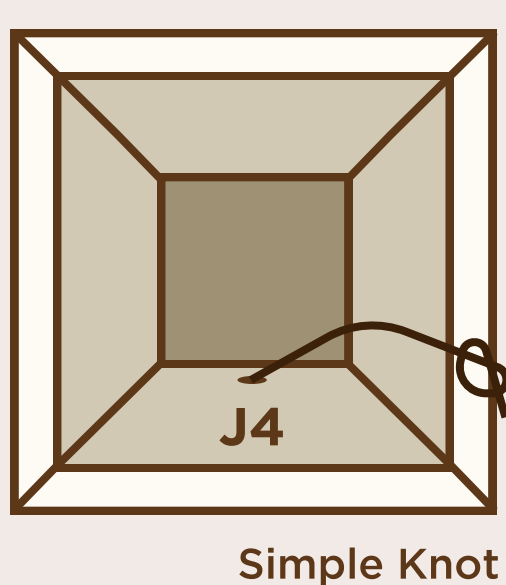

Simple Knot

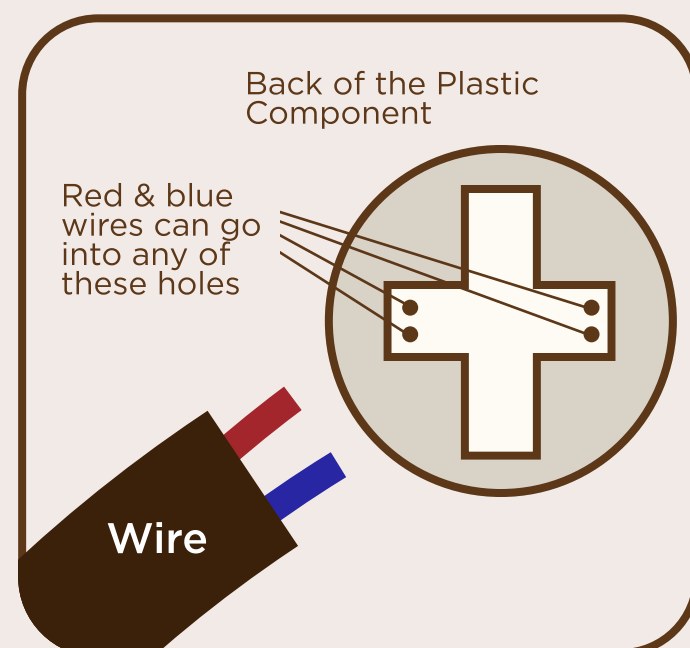


Back of the Plastic Component

Red & blue wires can go into any of these holes


Wire

## 09 Insert the Bulb Holder

1. Take apart the plastic bulb holder by unscrewing the top part.




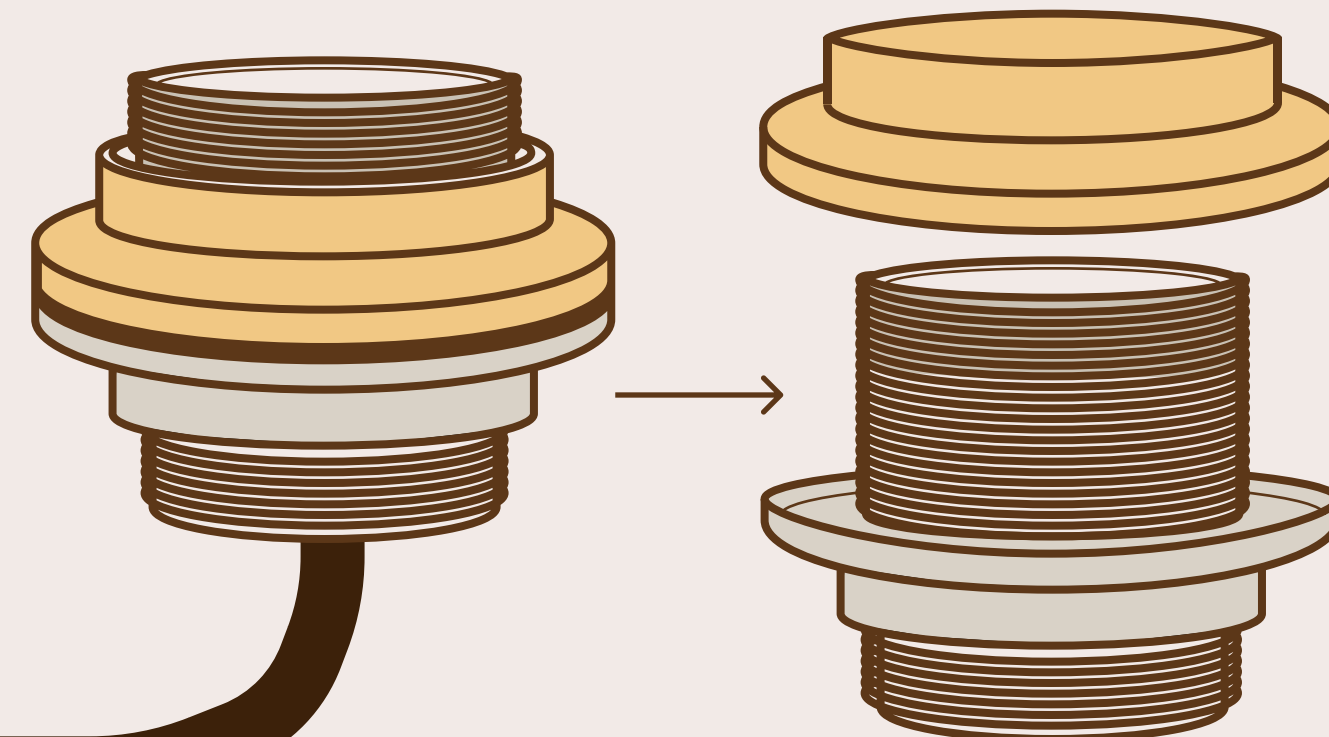


2. Place the bottom part of the plastic holder into the head of the dog.
3. Insert part K (the bulb holder) into the grooves of the dog's head, ensuring it sits securely.
4. Screw the top part of the plastic component back on, tightly securing K.
5. Screw the bulb in.

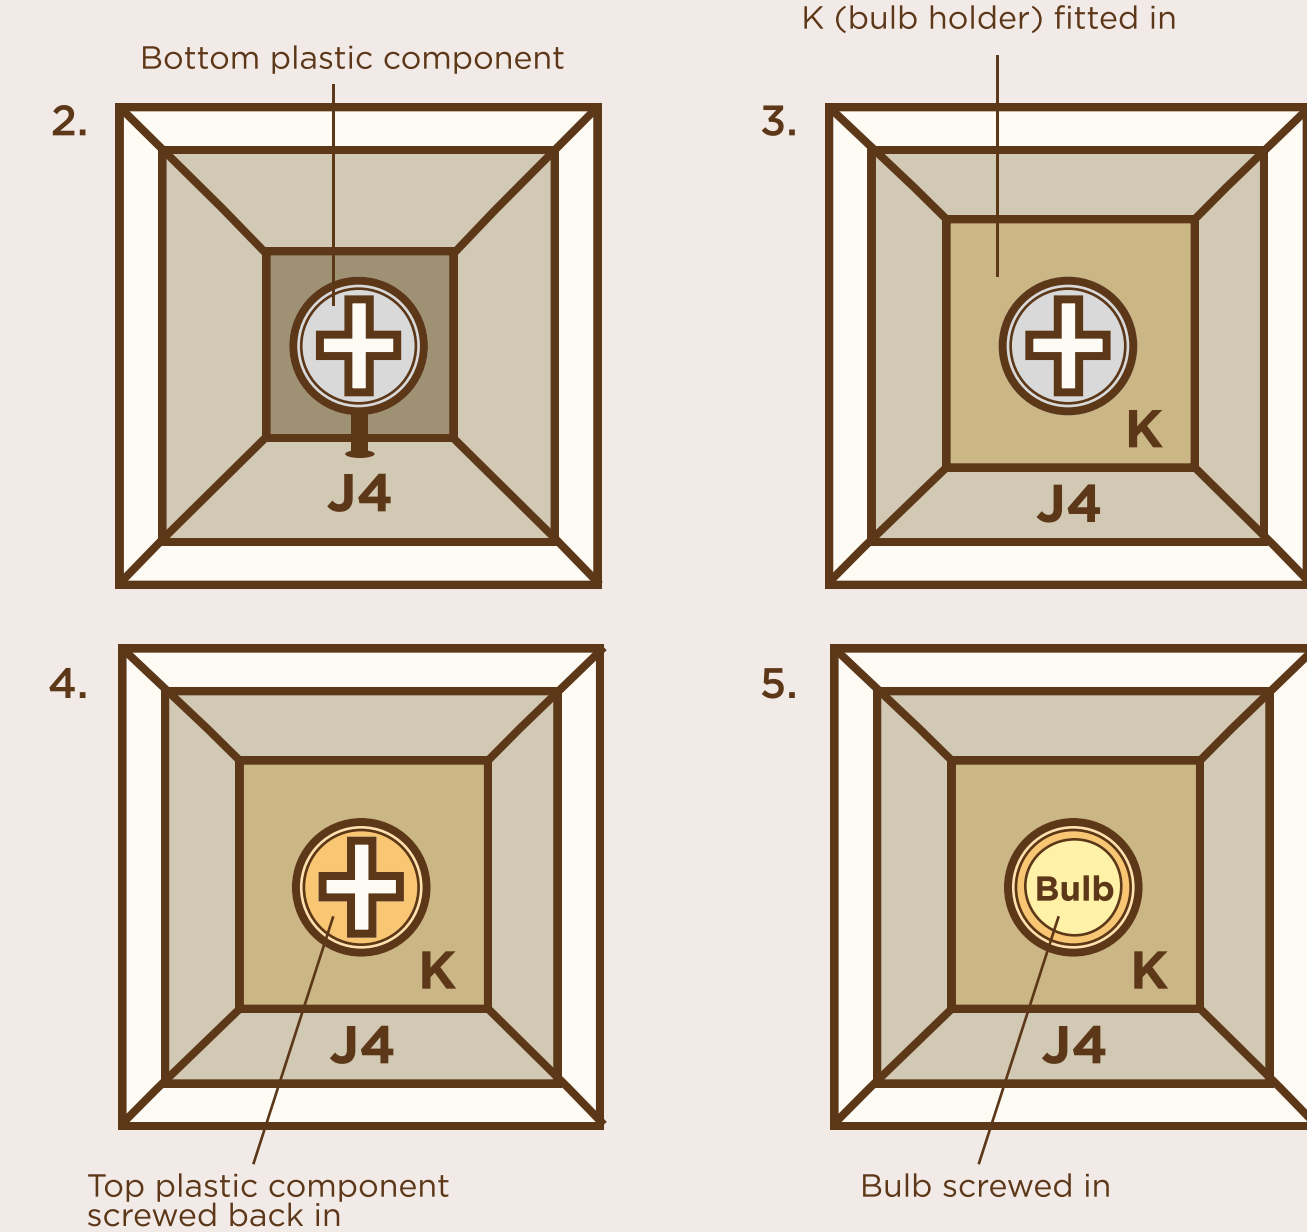

Bottom plastic component


K (bulb holder) fitted in

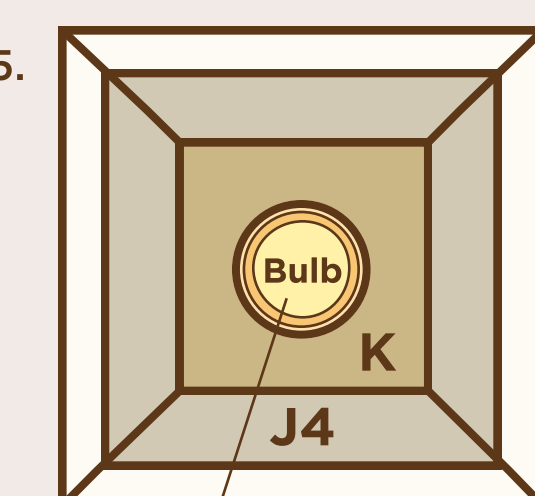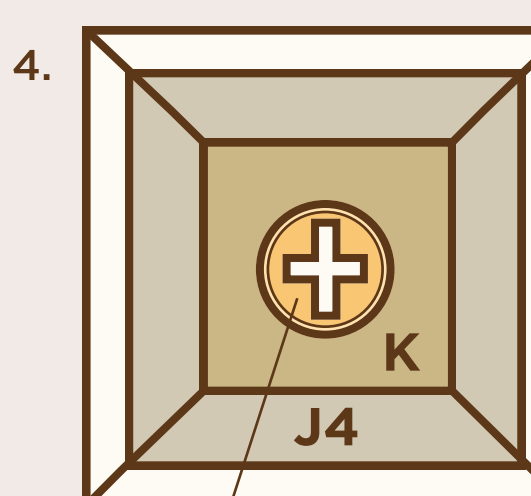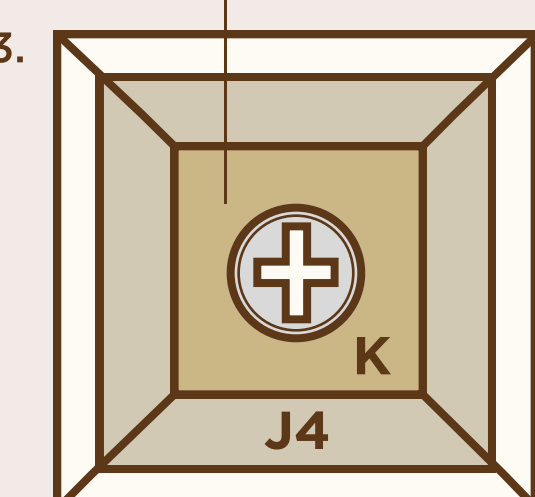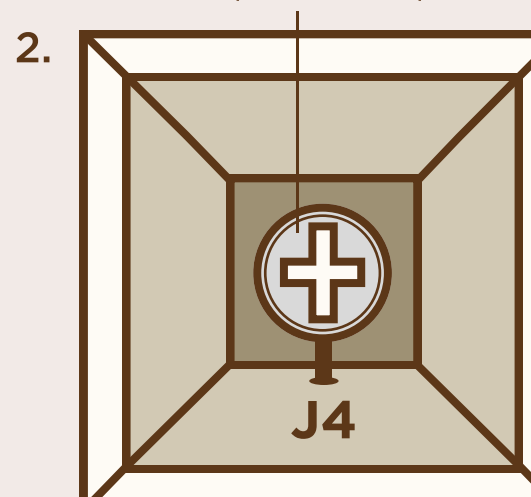


Top plastic component screwed back in

Bulb screwed in


## 10 Securing the Bulb Holder

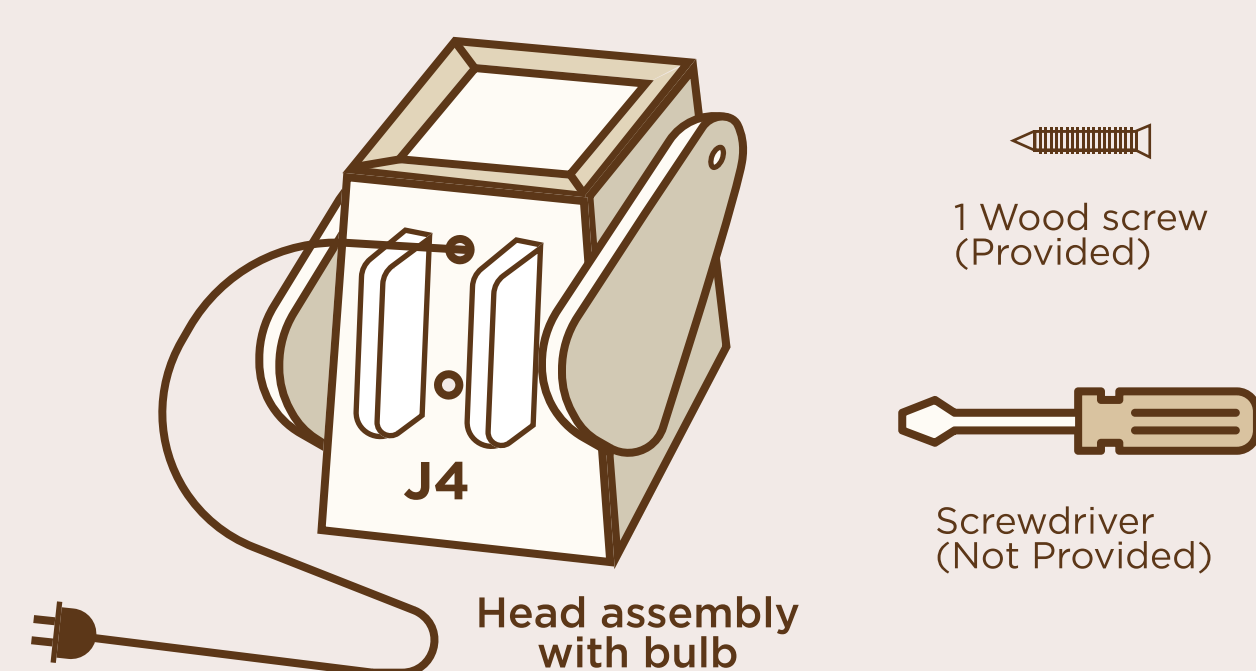


1. Flip the dog head such that J4 is facing you.
2. Using a screwdriver, apply steady pressure and force to drive the wood screws through the bottom hole in J4, into the bulb holder K to secure it.

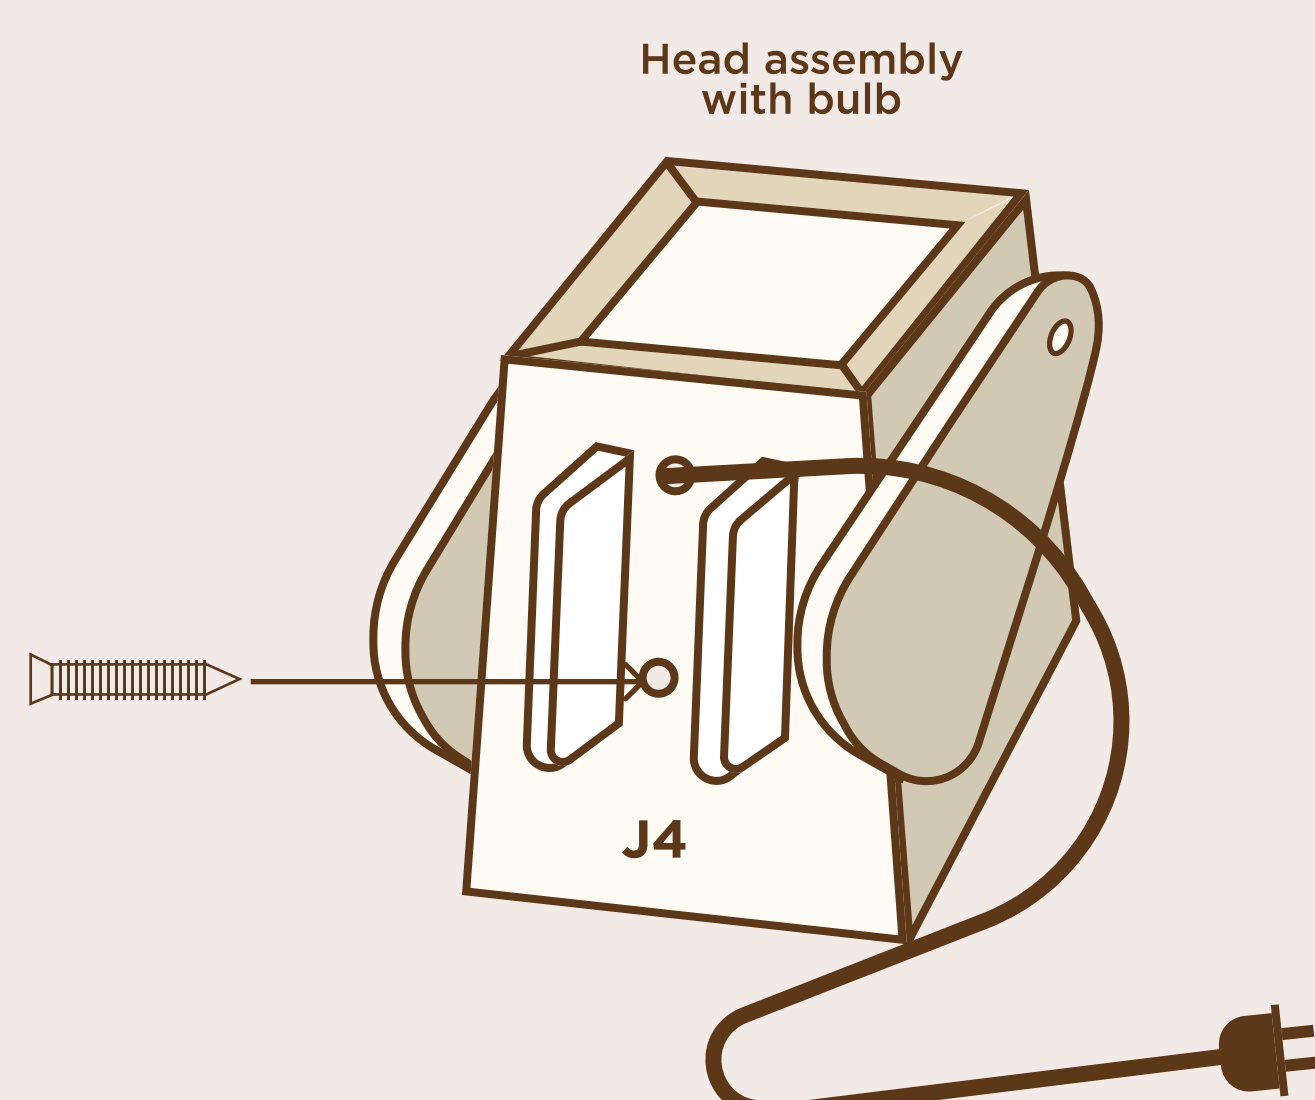

## 11 Screw Head Assembly to Body

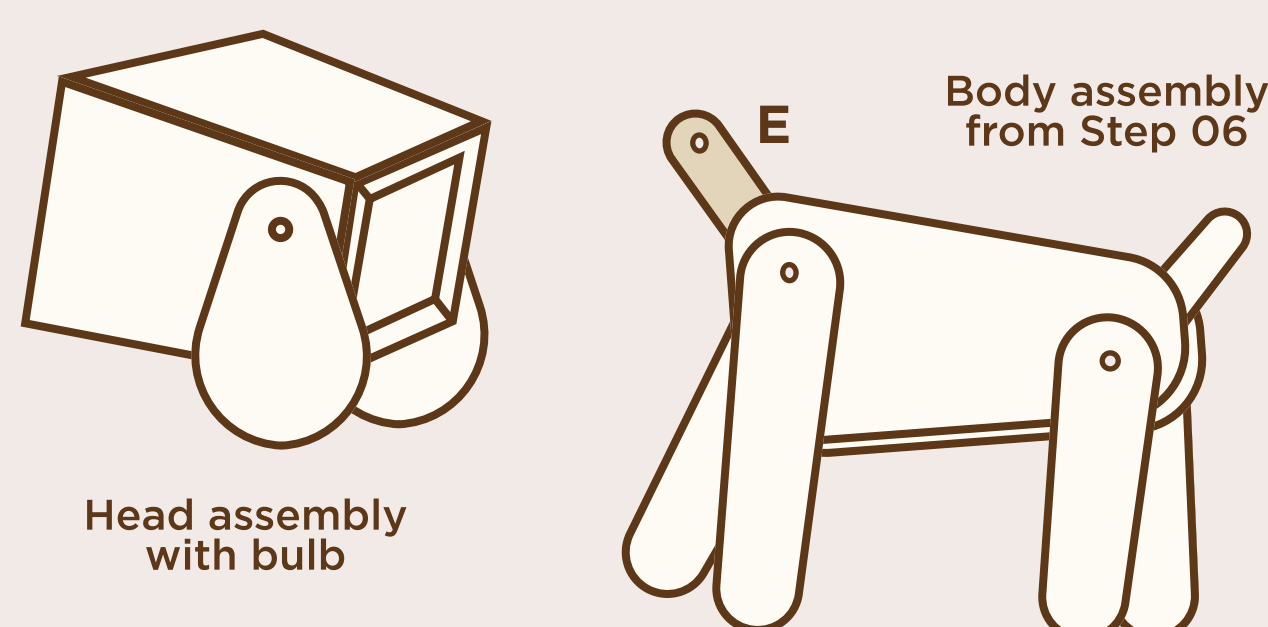


1. Flip the dog head such that J4 is facing you.
2. Sandwich E (Lower Neck) between F1 and F2 (Upper Neck).
3. Using the medium male screw, secure F1, E and F2 together.

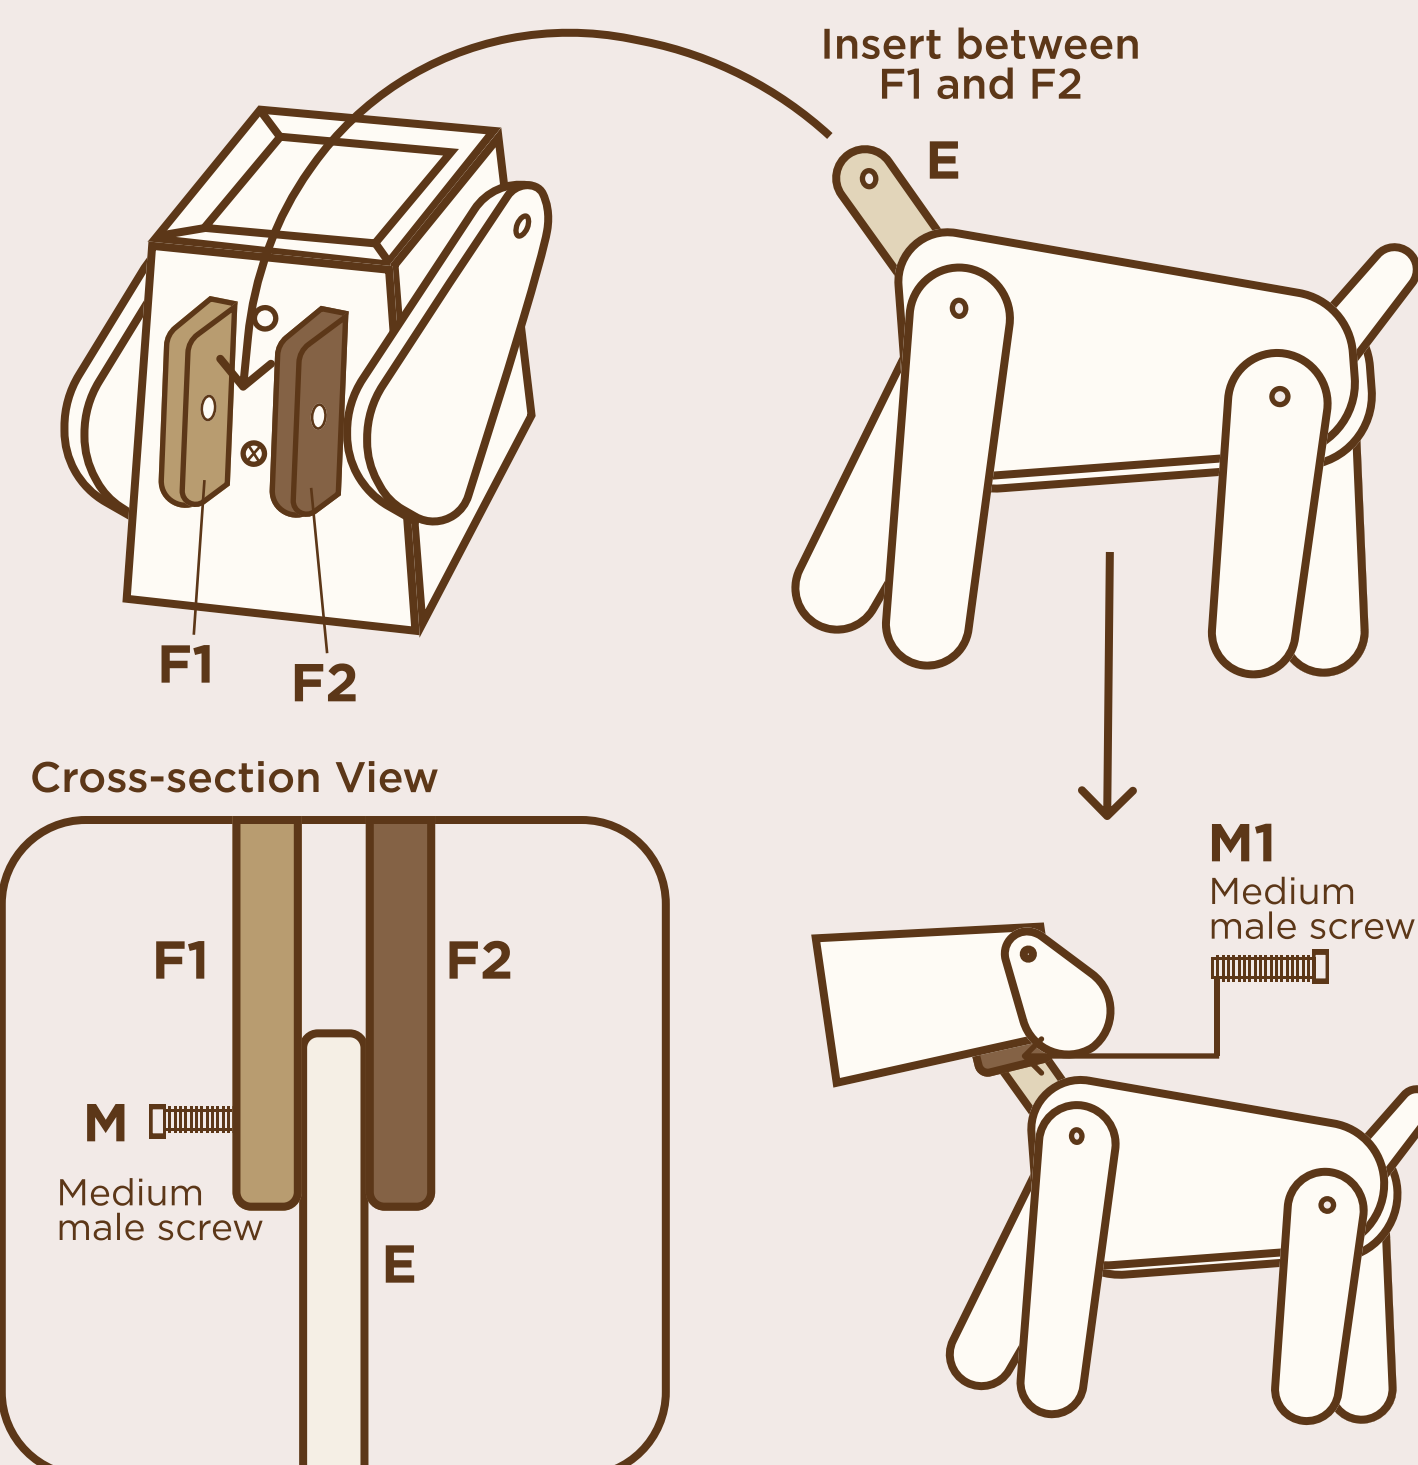

Insert between F1 and F2

Cross-section View

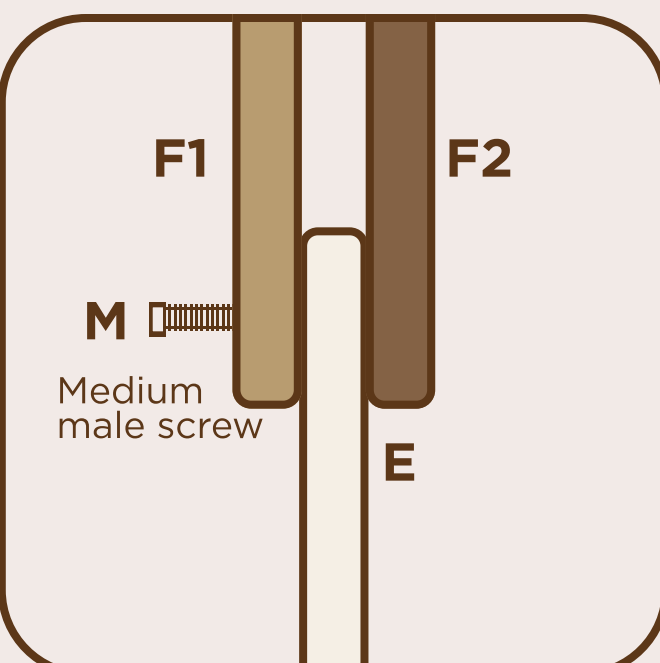

M1 Medium male screw 1

## Need a Little Extra Help?



If you're having any trouble assembling your Luminous Paws kit, we've got you covered! Check out our *specialised courses* designed to guide you through the process step-by-step.

Simply scan the **QR code** or visit our website to explore available classes tailored for DIY enthusiasts like you.

Workshops we have held



## For Intermediate Woodworking Enthusiasts:

Looking to elevate your woodworking skills? We offer a range of *professional tools*, including routers and more, available on our website under the 'Shop' section.

Perfect for those ready to take their projects to the next level!

